


# TC-K520

## SERVICE MANUAL

*Canadian Model*

*AEP Model*

*UK Model*

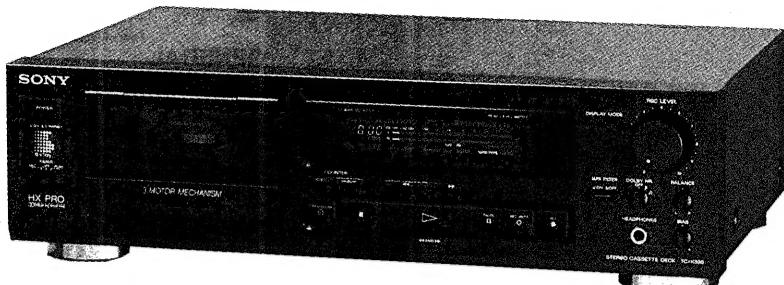

Model Name Using Similar Mechanism	TC-RX70/RX70ES
Tape Transport Mechanism Type	TCM-200V1

### SPECIFICATIONS

Recording system	4-track 2-channel stereo
Bias	AC bias
Wow and flutter	±0.16% W Peak (DIN)
Fast-forward and rewind time	Approx. 90 sec. (with C-60 cassette)
Frequency response (DOLBY NR off)	

TYPE IV cassette (Sony METAL-ES)	25 - 19,000 Hz ( $\pm 3$ dB, DIN) 30 - 15,000 Hz (0VU recording, $\pm 3$ dB)
TYPE II cassette (Sony UX-S)	25 - 17,000 Hz ( $\pm 3$ dB, DIN) 15 - 18,000 Hz
TYPE I cassette (Sony HF-S)	25 - 16,000 Hz ( $\pm 3$ dB, DIN) 15 - 17,000 Hz

Signal-to-noise ratio (at peak level)

Cassette	Dolby NR switch	OFF	B-TYPE ON	C-TYPE ON
TYPE IV (Sony METAL-ES)		59 dB	67 dB	74 dB
TYPE II (Sony UX-S)		58 dB	66 dB	73 dB
TYPE I (Sony HF-S)		56 dB	64 dB	71 dB

Total harmonic distortion

1.0% (with Sony METAL-ES cassette)

Inputs

Line inputs (phono jacks)	Sensitivity	77.5 mV (-20 dB)
	Input impedance	50k ohms

Outputs

Line outputs (phono jacks)	Rated output level	0.44 V (-5 dB) at a load impedance 47k ohms
	Load impedance	Over 10k ohms
Headphones (stereo phone jack)	Output level	0.3 mW at a load impedance of 32 ohms

#### General

Power requirements AEP, West Germany models:  
220 V AC, 50/60 Hz

UK model:  
240 V AC, 50 Hz

Canadian model:  
120 V AC, 60 Hz

Power consumption AEP, West Germany, UK models:  
20 W

Canadian model: 19 W  
Approx. 430 × 123 × 285 mm (w/h/d)  
(17 × 4 7/8 × 11 1/4 inches)

Dimensions Weight Approx. 4.7 kg(10 lbs 6 oz)

Supplied accessory Audio connecting cord (2)

Design and specifications subject to change without notice.

#### Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

**STEREO CASSETTE DECK**  
**SONY®**

# OPERATING VOLTAGE

Before connecting the unit to the power source, check that the operating voltage of your unit is the same as the local power line voltage.


The Canadian model operates on 120V AC.

The WG, AEP model operates on 220V AC.

The UK model operates on 240V AC.

## MODEL IDENTIFICATION

*— Specification Label —*

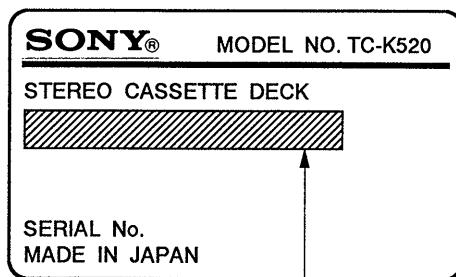

WG, AEP model: AC: 220 V ~50/60 Hz

Canadian Model: AC: 120 V 60Hz 19 W

UK model: AC: 240 V ~50/60 Hz

## TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications .....	1	
Operating Voltage .....	2	
<b>1. GENERAL</b>		
Identification of Front Panel Parts .....	3	
<b>2. DISASSEMBLY</b> .....	4	
<b>3. MECHANICAL ADJUSTMENTS</b> .....	7	
<b>4. ELECTRICAL ADJUSTMENTS</b> .....	7	
Record/Playback Head Azimuth Adjustment .....	7	
Tape Speed Adjustment .....	8	
Playback Level Adjustment .....	8	
Bias Consumption Current Adjustment .....	8	
Record Bias Adjustment .....	9	
Record Level Adjustment .....	9	
<b>5. DIAGRAMS</b>		
5-1. Printed Wiring Boards .....	11	
5-2. Schematic Diagram .....	15	
<b>6. EXPLODED VIEWS</b> .....	21	
<b>7. ELECTRICAL PARTS LIST</b> .....	25	

## SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


ATTENTION AU COMPOSANT AYANT RAPPORT  
À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## SECTION 1

## GENERAL

## Identification of Front Panel Parts

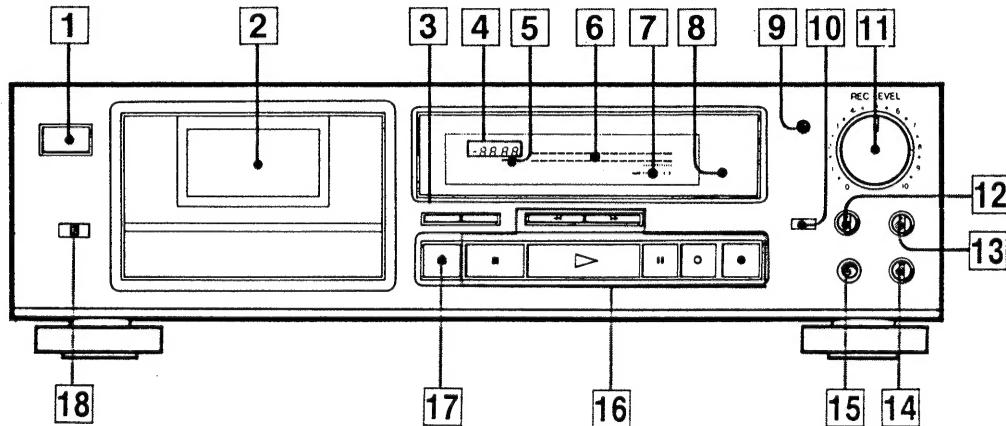

- 1** POWER switch  
**2** Cassette holder  
**3** COUNTER buttons  
 RESET button/MEMORY button

- 4** LINEAR COUNTER  
**5** MEMORY indicator  
**6** PEAK LEVEL METER  
**7** TAPE TYPE indicator  
**8** Remote sensor

You can remotely control this cassette deck with:  
 — A remote commander that has an  mark and comes with a Sony amplifier or receiver and which can be used to control a cassette deck.  
 — An optional Sony remote commander that has an  mark.

- 9** DISPLAY MODE button  
**10** MPX FILTER switch  
**11** REC LEVEL (recording level) control  
**12** DOLBY NR switch

- 13** BALANCE control  
**14** BIAS (bias adjust) control  
**15** HEADPHONES jack (stereo phone jack)  
**16** Tape operation buttons

- ◀ (rewind) button
- ▶ (fast-forward) button
- (stop) button
- ▷ (play) button (AMS\*)
- PAUSE button
- REC MUTE (record muting) button
- REC (record) button

- 17** ▲ OPEN/CLOSE button  
**18** TIMER switch

\* AMS is an abbreviation for Automatic Music Sensor.


## SECTION 2

### DISASSEMBLY


**Note:** Follow the disassembly procedure in the numerical order given.

Unscrew the four case attachment screws M3 × 8 and remote the upper case.

#### MAIN BOARD

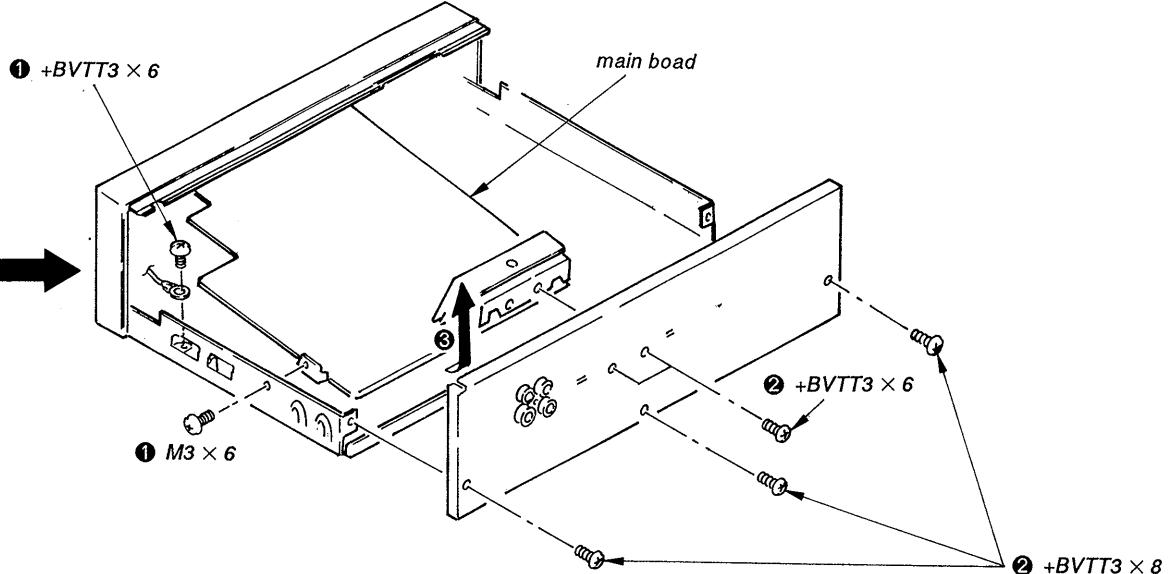


#### MECHANISM


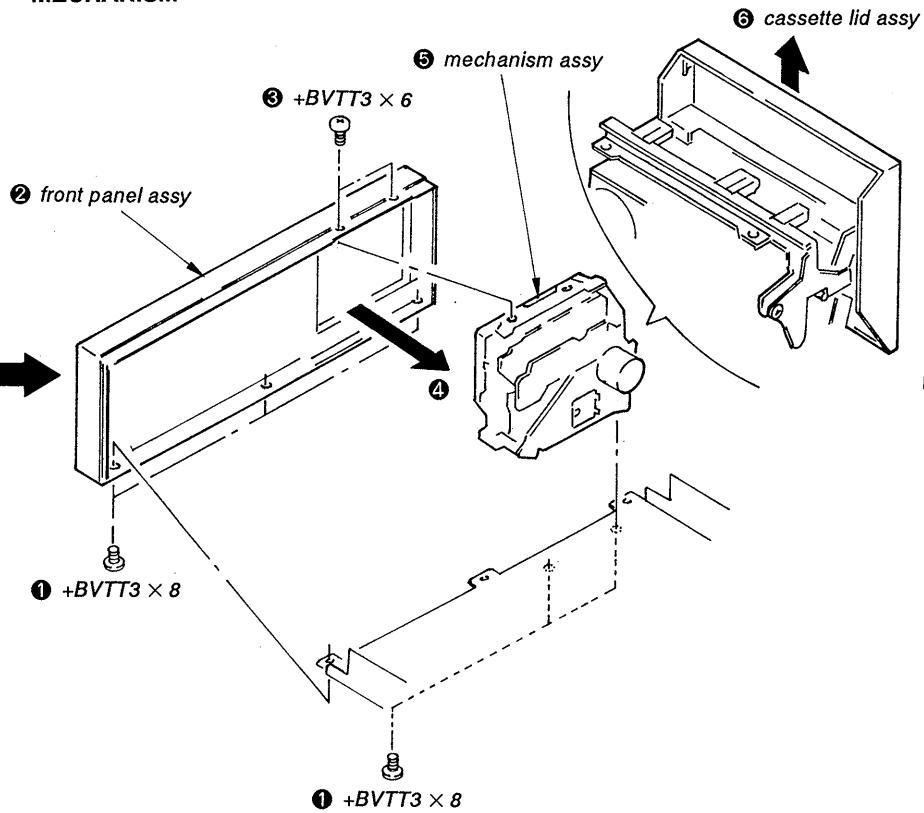


**CASSETTE HOLDER**


- ③ Push LEVER (LIFTER) in the direction of arrow and remove CASSETTE HOLDER.

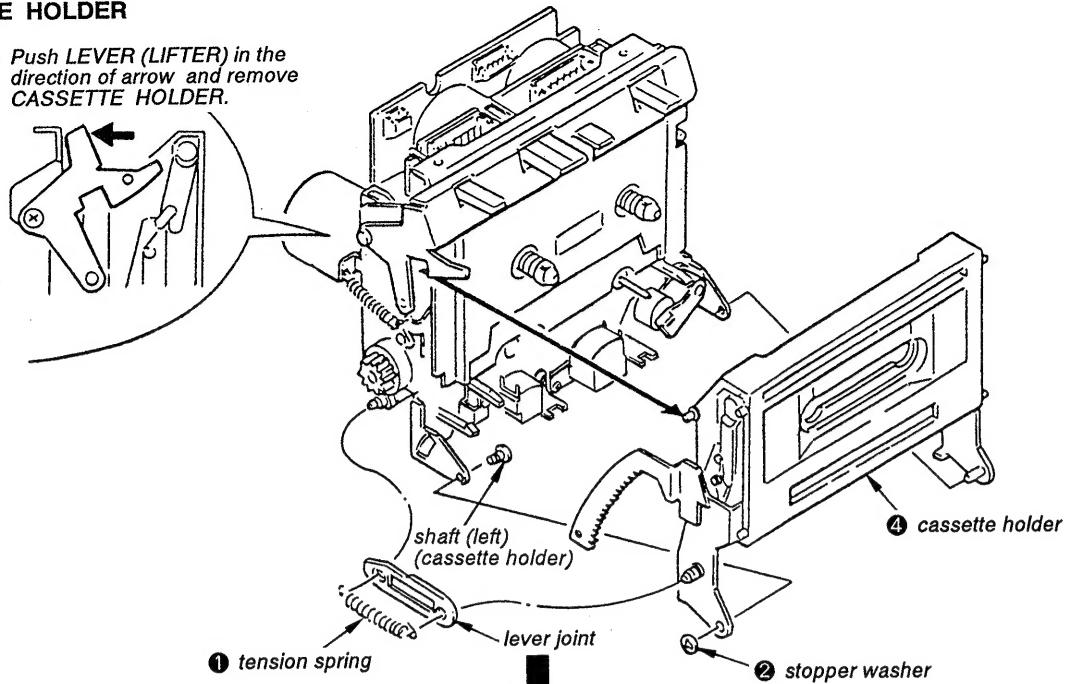**ORNAMENTAL PLATE**


- ② Push LEVER (LIFTER) in the direction of arrow and remove ORNAMENTAL PLATE.

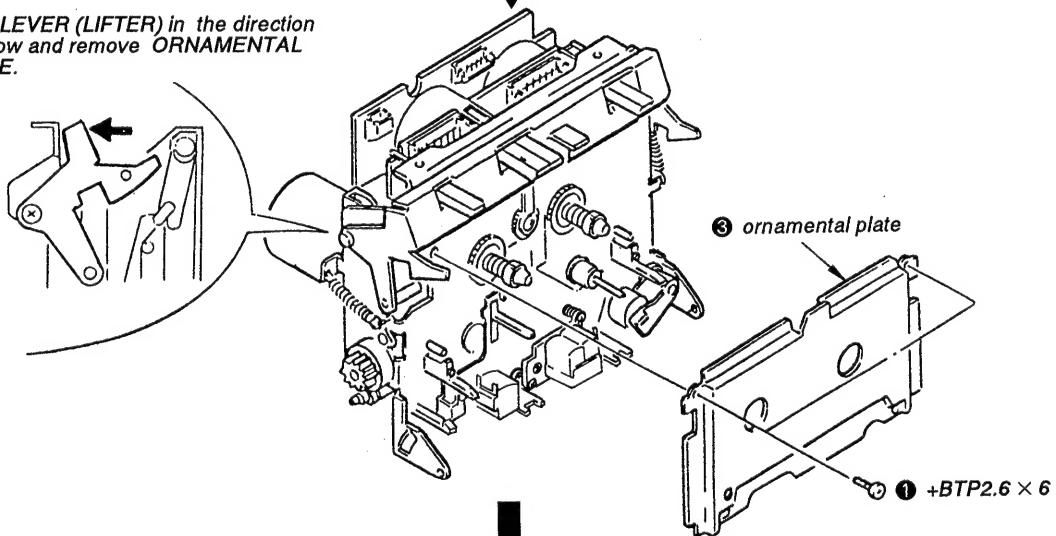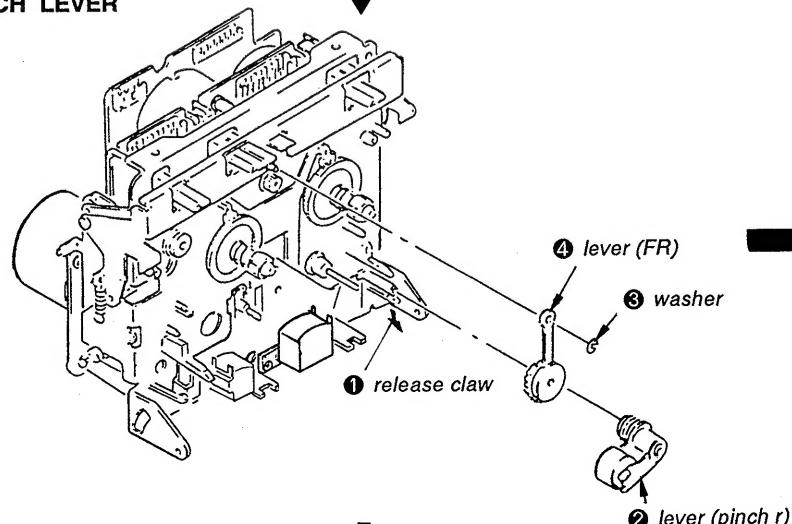**PINCH LEVER**

## CAPSTAN MOTOR/FLYWHEEL

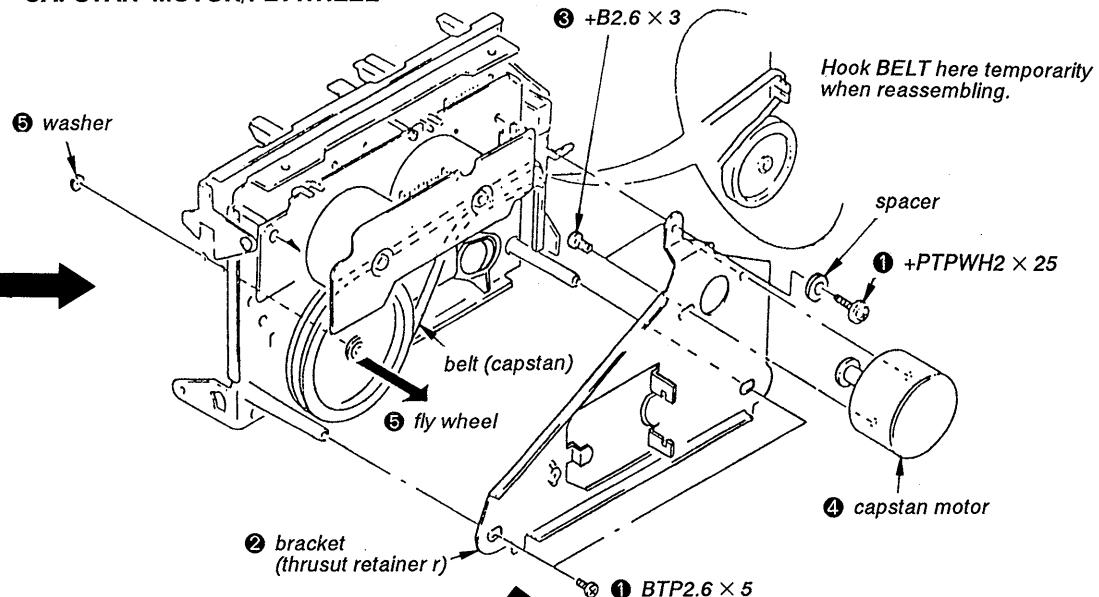

## REEL AND MOTORS

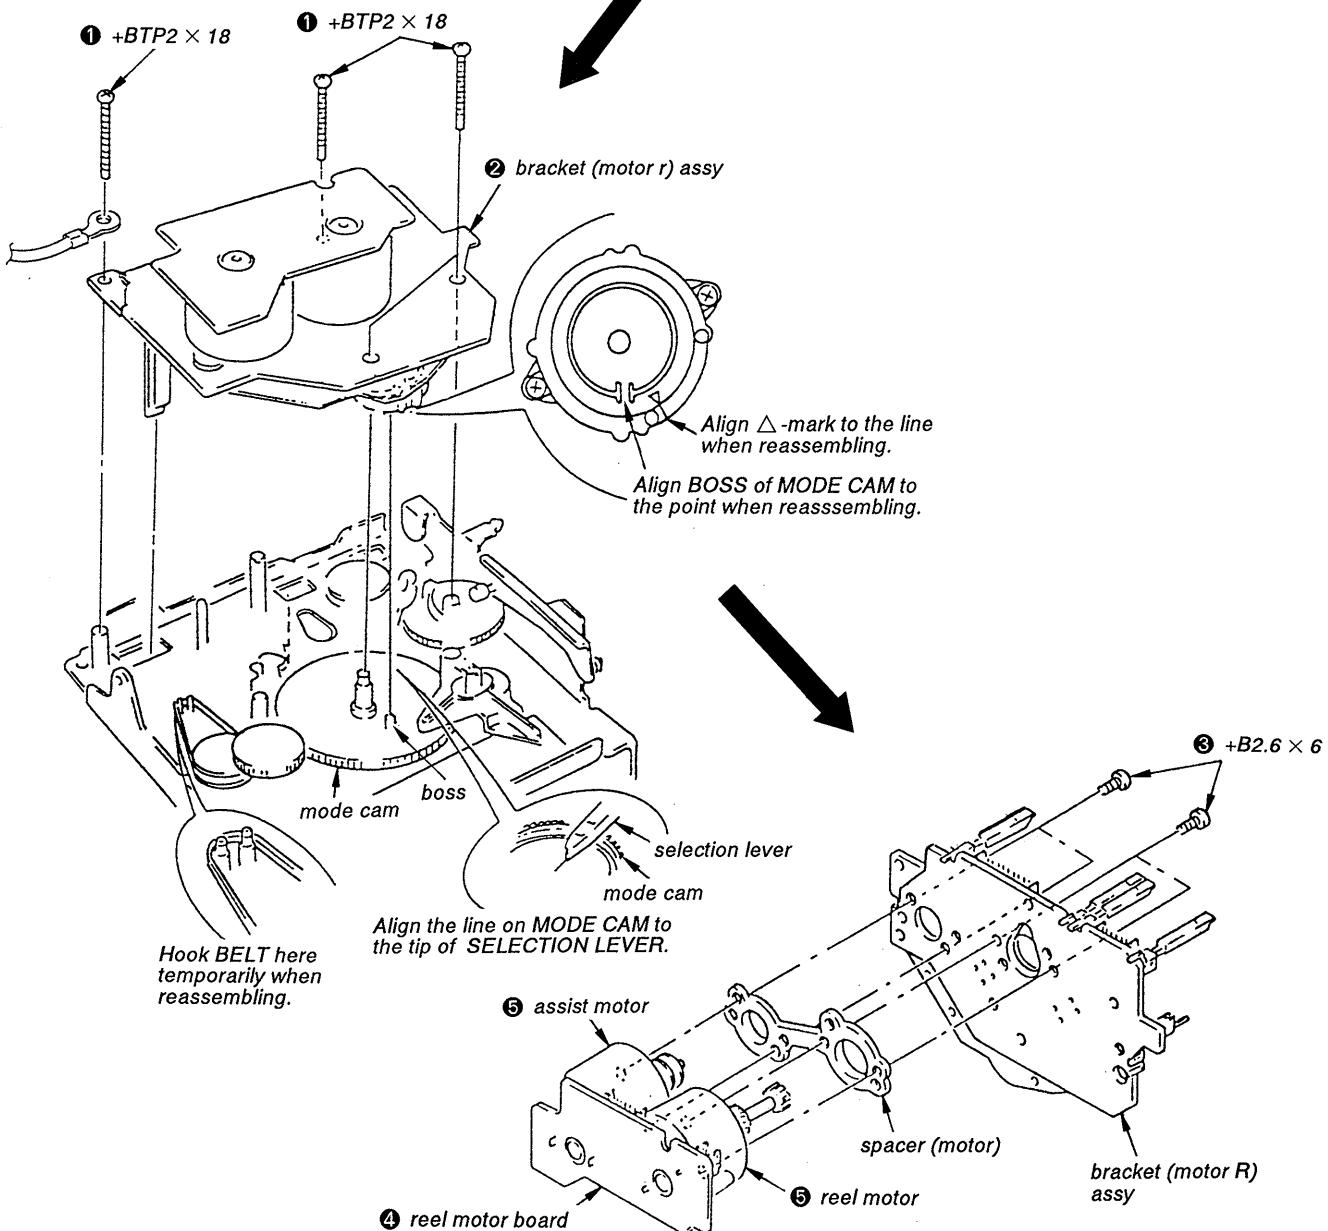

## SECTION 3

### MECHANICAL ADJUSTMENTS

#### PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:
 

record/playback head	pinch roller
erase head	rubber belts
capstan	idle
2. Demagnetize the record/playback head with a head demagnetizer. (Do not bring the head demagnetizer close to the erase head.)
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

#### Torque Measurement

Torque	Torque meter	Meter reading
Forward	CQ-102C	30—60g·cm (0.42—0.83oz·inch)
Forward back tension	CQ-102C	1—5g·cm (0.014—0.069oz·inch)
FF/REW	CQ-201B	70—120g·cm (0.97—1.68oz·inch)

## SECTION 4


### ELECTRICAL ADJUSTMENTS

1. The adjustment should be performed in the publication (Be sure to make playback adjustment at first.)
2. The adjustment and measurement should be performed for both L-CH and R-CH.
  - Switch position
 

DOLBY NR switch: OFF  
TIMER switch: OFF  
MPX FILTER switch: OFF
  - Standard record position
 

Deliver the standard input signal level to the input jack and set the REC LEVEL control to obtain the standard output signal level as follows.

—Record mode—

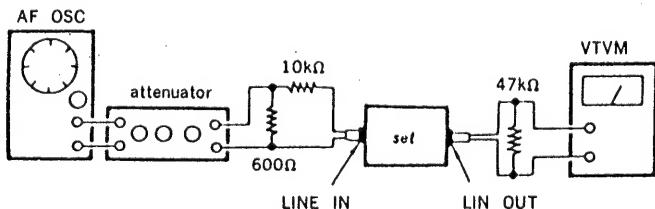

• Standard Input Level

Input terminal	LINE IN
source impedance	10kΩ
input signal level	0.25V (-10dB)

• Standard Output Level

Output terminal	LINE OUT
load impedance	47kΩ
output signal level	0.44V (-5dB)


#### TEST TAPE

Tape	Contents	Use
P-4-A100	10kHz, -10dB	Record/Playback Head Azimuth Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment
P-4-L300	315Hz, 0dB	Playback Level Adjustment


#### Record/Playback Head Azimuth Adjustment

procedure:

1. Playback Mode

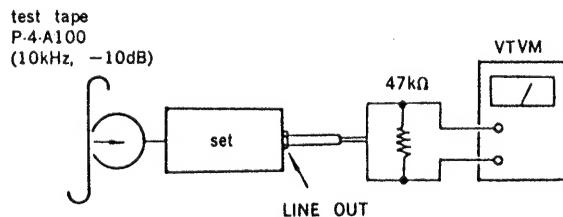


2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

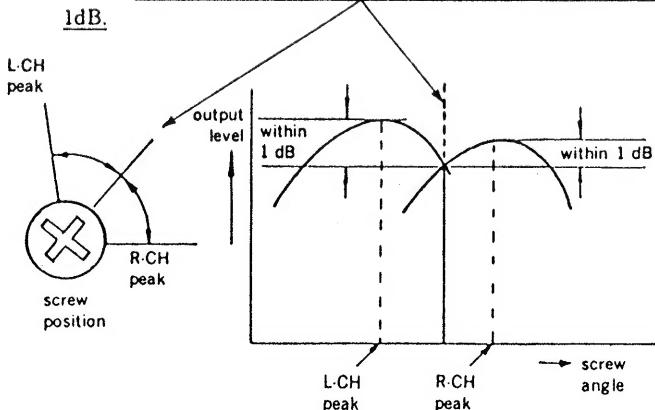


### 3. Phase Check

Playback mode

test tape  
P-4-A100  
(10kHz, -10dB)

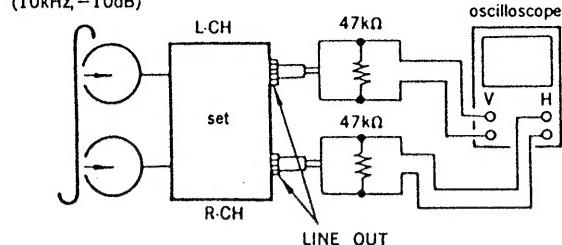


Screen pattern

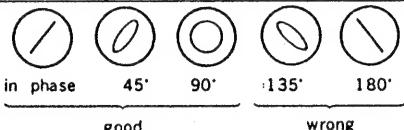

- After the adjustment, lock the adjustment screw with suitable locking compound.

Adjustment Location: —record/playback head—

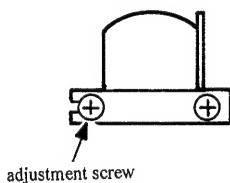


### Tape Speed Adjustment

Procedure :

Playback Mode

test tape  
WS-48B  
(3kHz, 0dB)

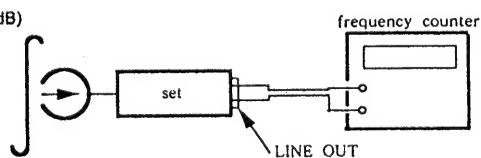


Specification :

Speed checker	Digital frequency counter
±0.5%	2,985—3,015Hz

Frequency difference between the beginning and the end of the tape shoule be within 0.5% (15Hz).

Adjustment Location :

adjustment the adjustabe resistor of built in motor  
(adjustment by the insert to driver Speed in fastest that turn the clockwise.)

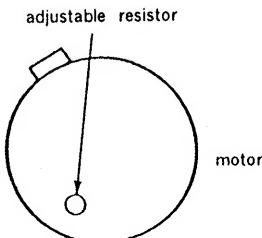


### Playback Level Adjustment

Procedure :

Playback mode

test tape  
P-4-L300  
(315Hz, 0dB)

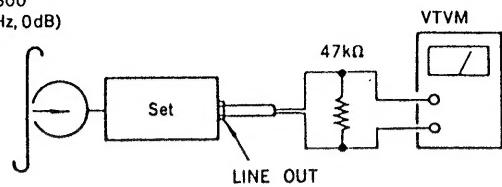

Specification :

Adjust RV101, 201 so that within adjustment level as follows.

LINE OUT level : 0.41 to 0.46V  
(-5.5 to -4.5dB)

Level Difference between Channels: Within 0.5dB

Confirm the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.


### Bias Consumption Current Adjustment

Bias Consumption current adjustment is neccessary to check before record bias adjustment.

The bias consumption current is wrong, record bias adjustment should do over again.

- Connect CNE503 with digital volt meter.
- Adjust T101, 201 to minimum reading of digital volt meter.

Reccord Mode  
LINE IN  
(no signal)

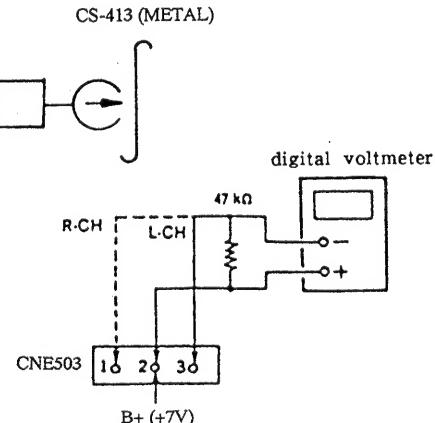

Adjust T101, 201 so That the minimum of digital voltmeter.


## Record Bias Adjustment

### Setting :


REC LEVEL knob shall be at the specified record position.

### Procedure :

1. Record Mode

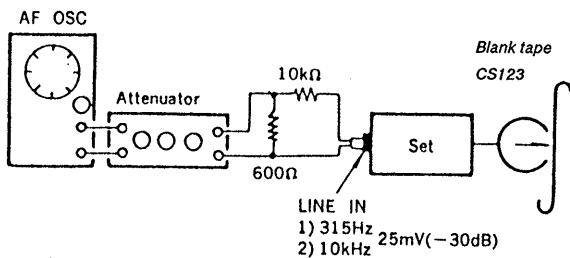

2. Playback Mode

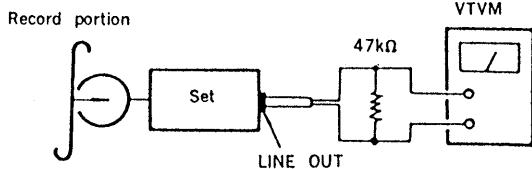

Adjust RV103, 203 so that playback output of 10kHz is  $0 \pm 0.5\text{dB}$  relative to that of 315Hz.


## Record Level Adjustment

### Setting :


REC LEVEL knob shall be at the specified record position.

### Procedure :

1. Record Mode

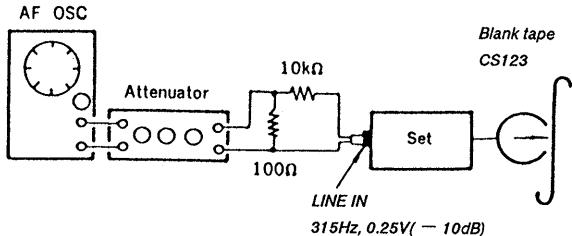

2. Playback Mode

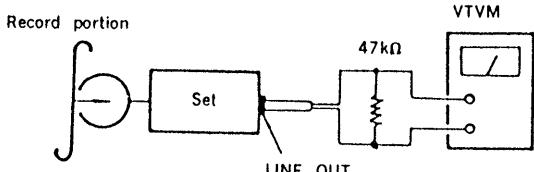

### Specification:

Adjust RV102, 202 so that within adjustment level as follows.

LINE OUT Level: CS-123


0.41 to 0.46V

( -5.5 to -4.5dB)

## Adjustment Location : main board


### 【 MAIN BOARD 】

- COMPONENT SIDE -

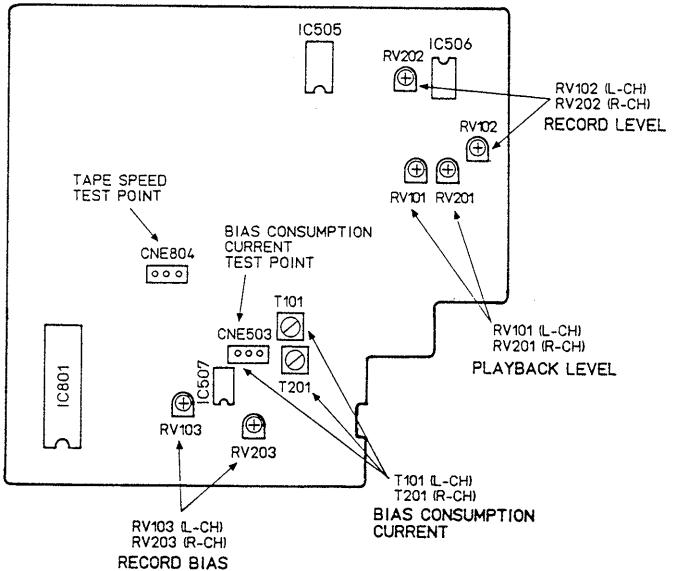


## SECTION 5 DIAGRAMS


- Circuit Boards Location

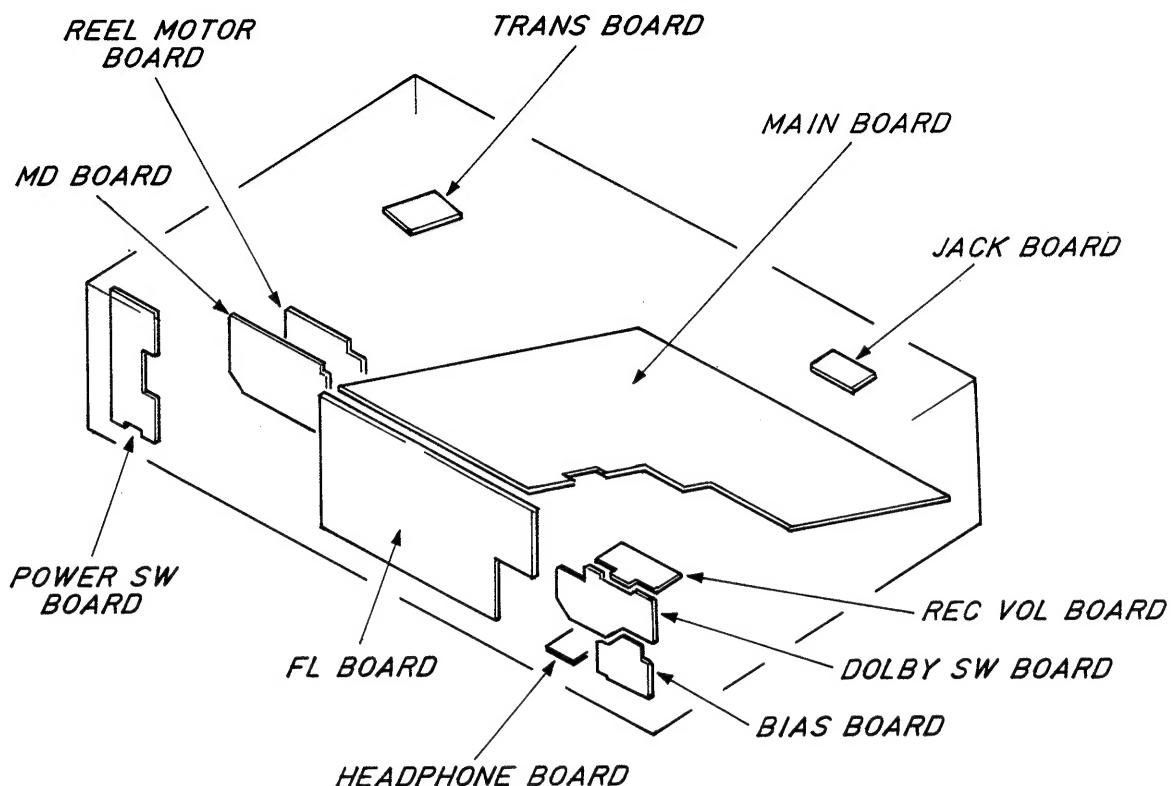



- Semiconductor Lead Layouts

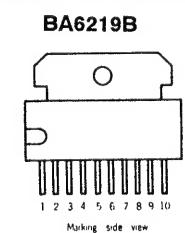


**2SA1175-HFE**  
**2SA1317-STU**  
**2SD1020-HFE**

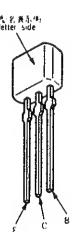


**HZS6A1L**  
**HZS6C3L**  
**UZL-7H1**  
**UZL-12H1**  
**1SS202-1**

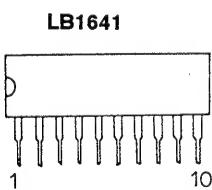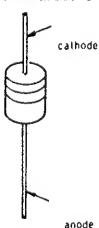


**2SA1409-TP**  
**2SC945-P**  
**2SB1116A-L**

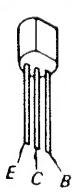


**10E2N**

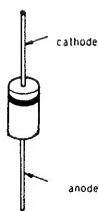


**DTA114ES**  
**DTC114ES**  
**DTC143TS**  
**2SC2603-EF**  
**2SD2144S**

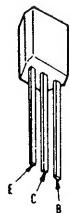

**2SB1187-EF**  
**2SD1761-EF**

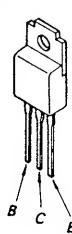

**GP2S22B**

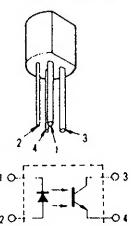

## **5-1. PRINTED WIRING BOARDS**

- See page 10 for Circuit boards Location and Semiconductor Lead Layouts.



#### **Note on Printed Wiring Board:**



- — : parts extracted from the component side.
  - ■ : parts mounted on the conductor side.
  - [ ] : indicates side identified with part number.

### **Conductor Location**

Location	Ref. No.	Location
H-11	IC803	E-12
G-11	IC804	E-11
G-13	IC851	G-18
I-13	IC1001	I-3
I-14	IC1002	I-4
K-9		
K-9	Q101	J-11
G-15	Q102	G-10
G-13	Q103	I-9
I-10	Q104	J-10
K-11	Q201	J-11
K-11	Q202	H-10
H-13	Q203	I-8
C-12	Q204	J-9
C-12	Q501	G-13
C-12	Q502	F-13
C-12	Q503	G-9
B-11	Q504	G-8
B-10	Q505	G-8
F-10	Q506	F-13
E-8	Q511	K-8
B-8	Q512	K-9
D-10	Q513	K-8
C-12	Q515	E-14
C-12	Q516	E-15
C-12	Q518	E-14
B-12	Q519	H-15
B-12	Q520	H-15
B-10	Q701	E-10
C-8	Q702	D-9
C-8	Q703	D-9
C-10	Q704	C-8
B-11	Q705	B-8
C-10	Q706	C-10
D-11	Q707	C-10
E-13	Q708	E-10
D-13	Q709	E-9
F-13	Q710	C-9
F-12	Q711	B-8
F-12	Q712	C-10
B-6	Q801	D-14
B-6	Q802	E-14
E-18	Q803	D-14
E-18	Q804	D-14
G-16	Q805	F-12
B-6	Q806	E-10
F-16	Q807	E-16
C-16	Q808	D-16
C-16	Q809	C-13
B-11	Q810	C-13
G-4	Q811	G-16
	Q812	B-13
I-12	Q813	B-13
F-11	Q814	F-18
G-11	Q815	F-18
G-12	Q851	E-16
H-9	Q853	E-16
J-9	Q854	E-16
F-14	Q855	F-16
F-9	Q856	F-16
C-14	Q857	G-16
E-13	Q858	H-15

## LT851 FLUORESCENT DISPLAY TUBE

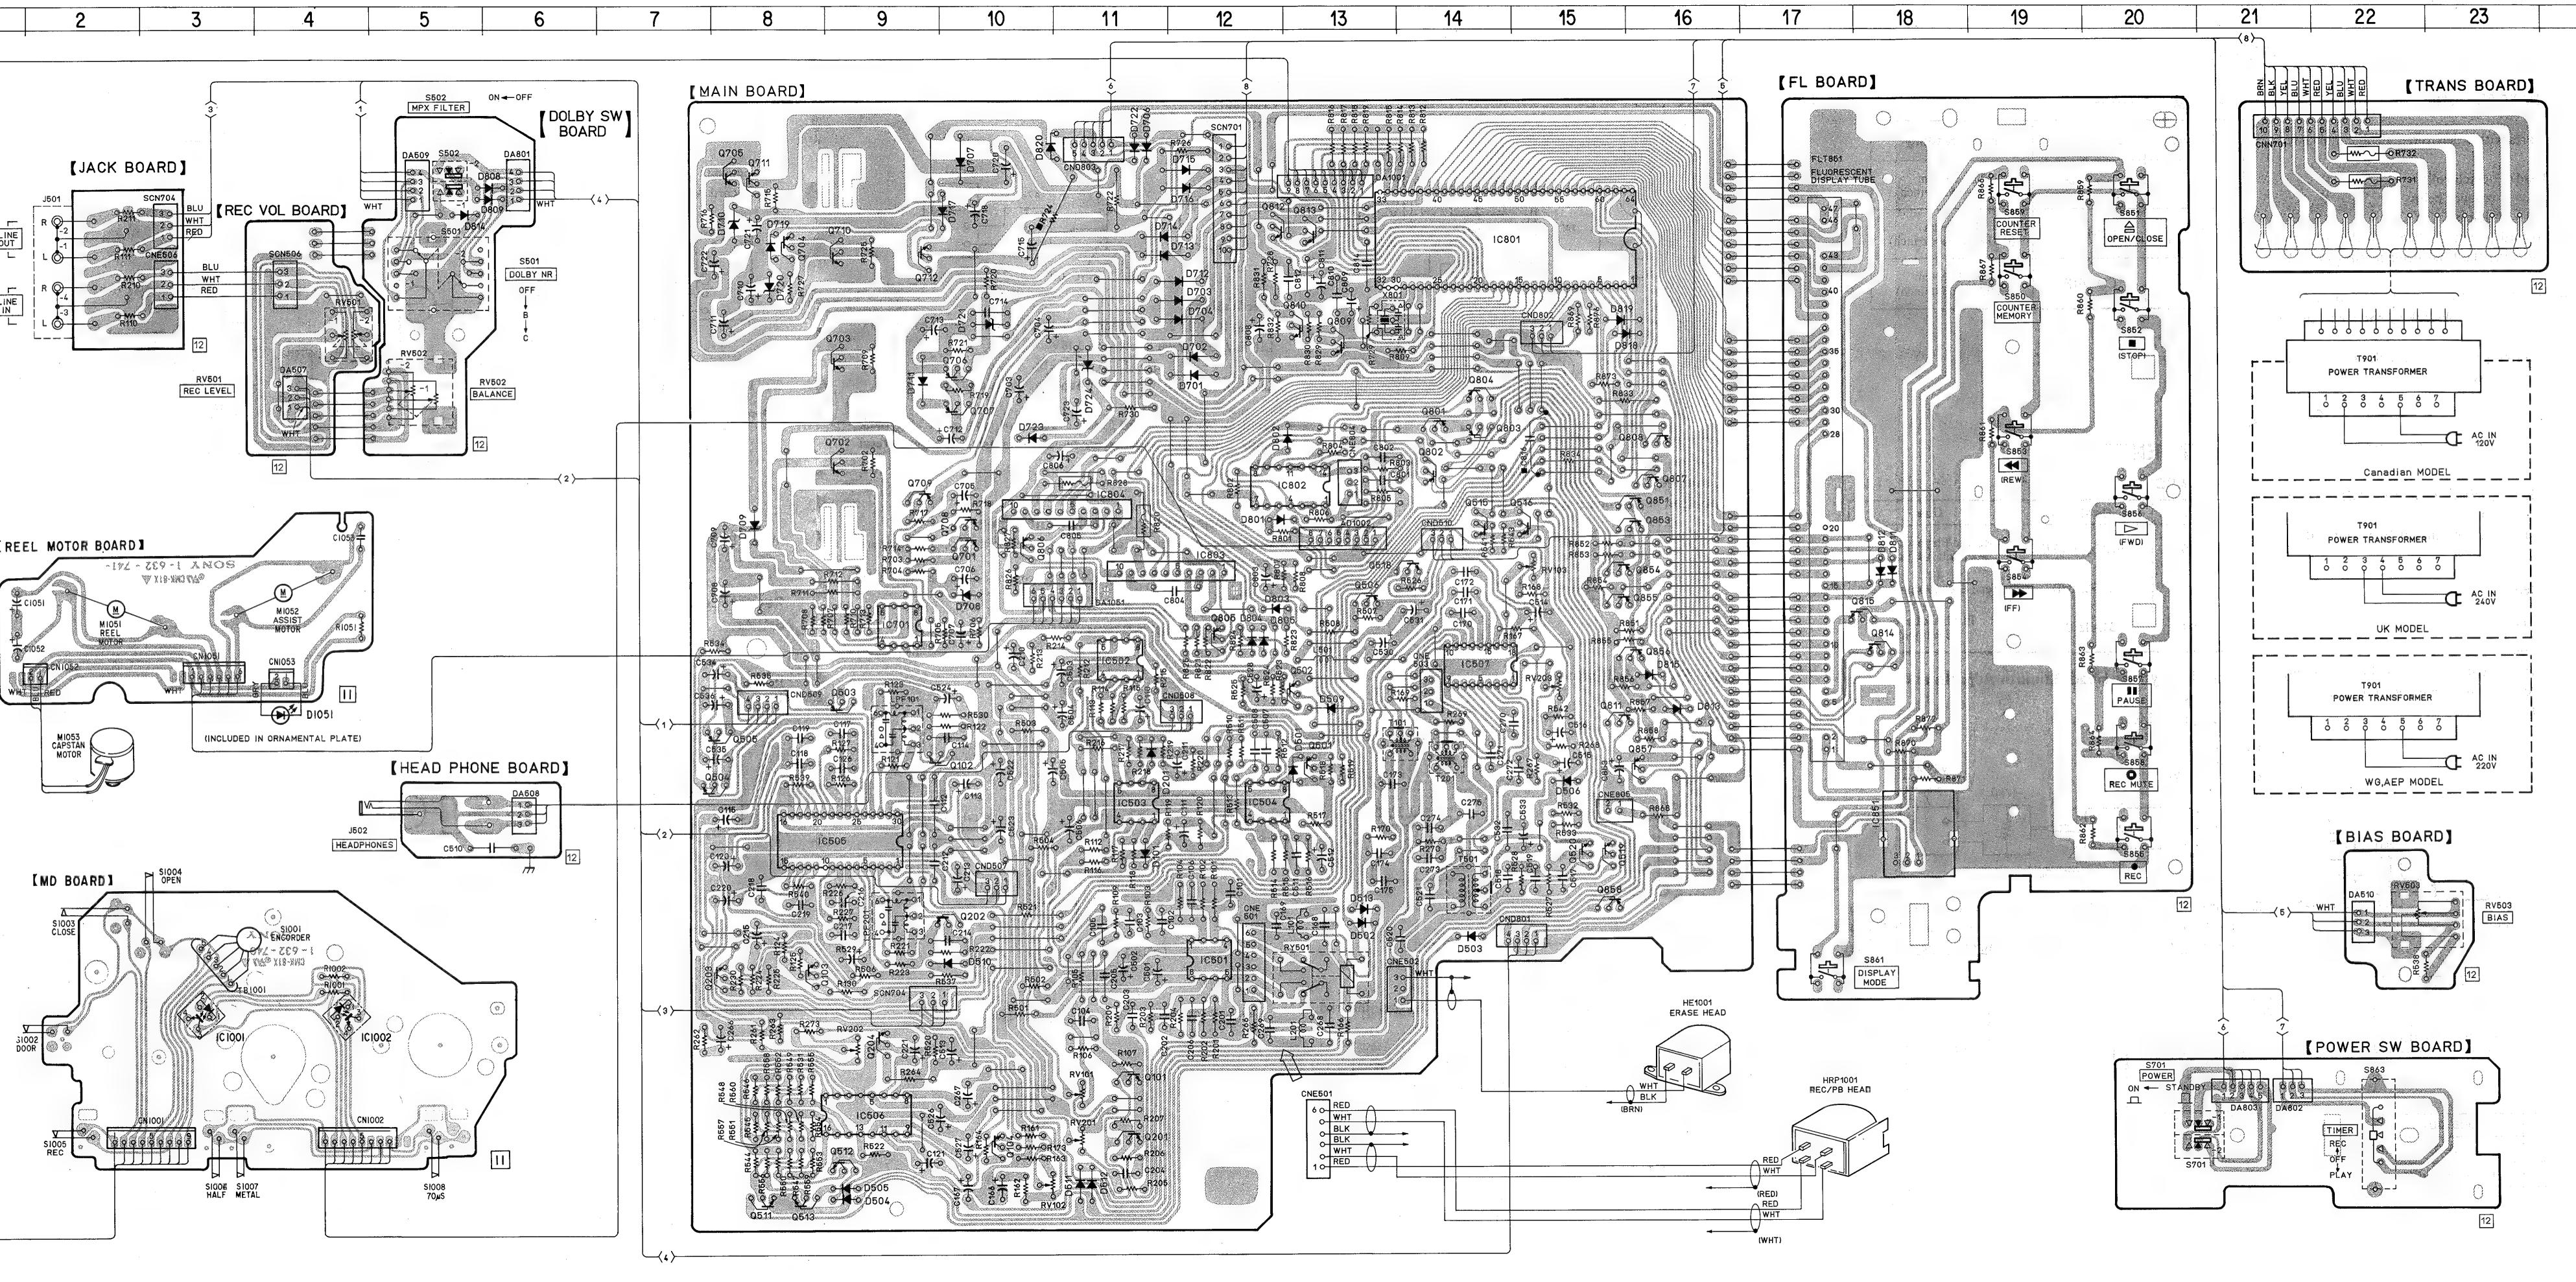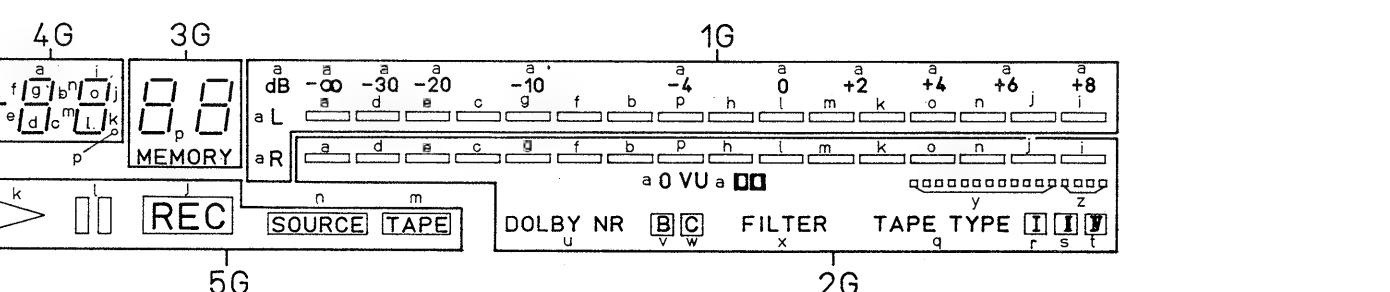

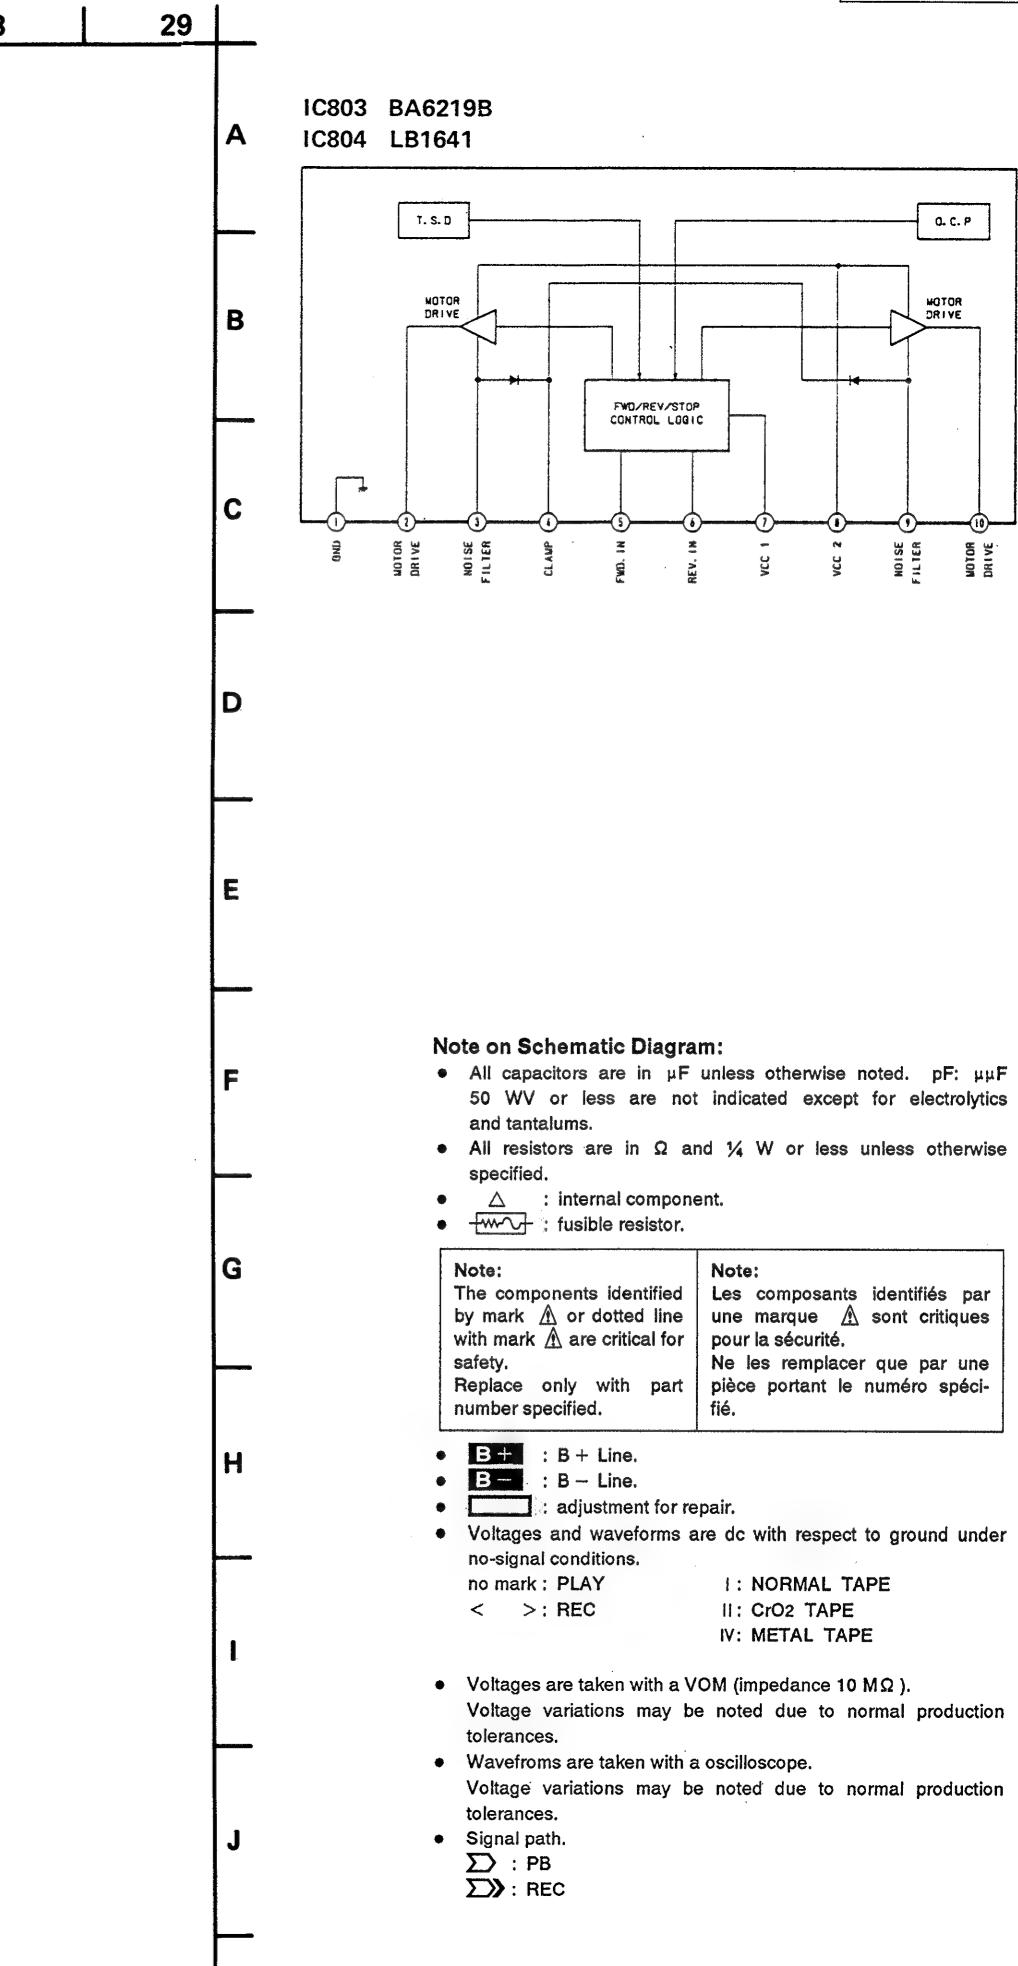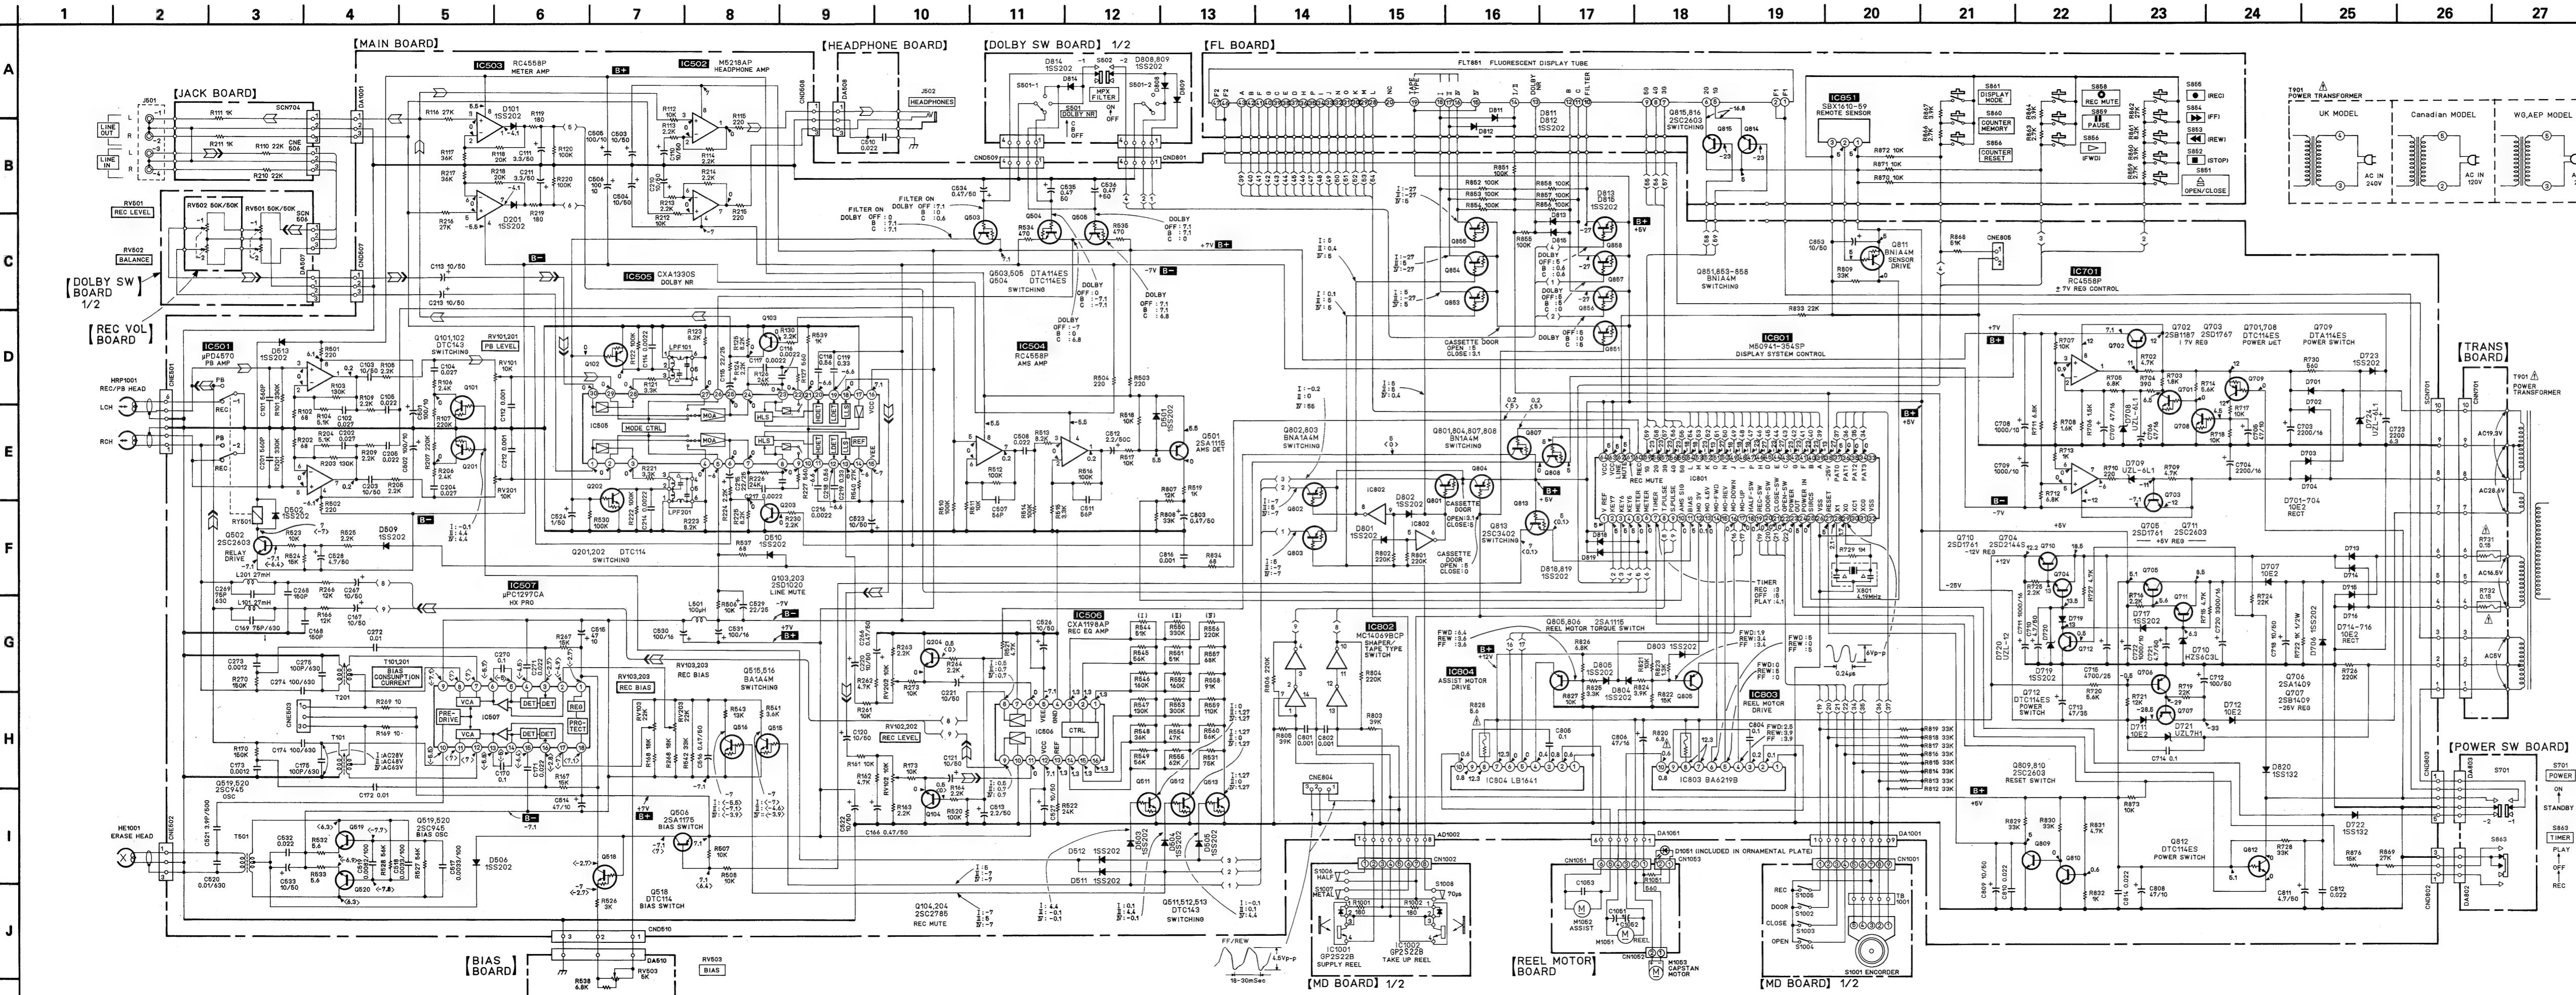

## SECTION 6

### EXPLODED VIEWS

**NOTE:**

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a callout number in the remark column.
- Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.

- Color Indication of Appearance Parts Example:

(RED) ... KNOB, BALANCE (WHITE)

↑   ↑


Cabinet's Color

Parts' Color

- WG: West Germany model


The components identified by mark **▲** or dotted line with mark **▲** are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque **▲** sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

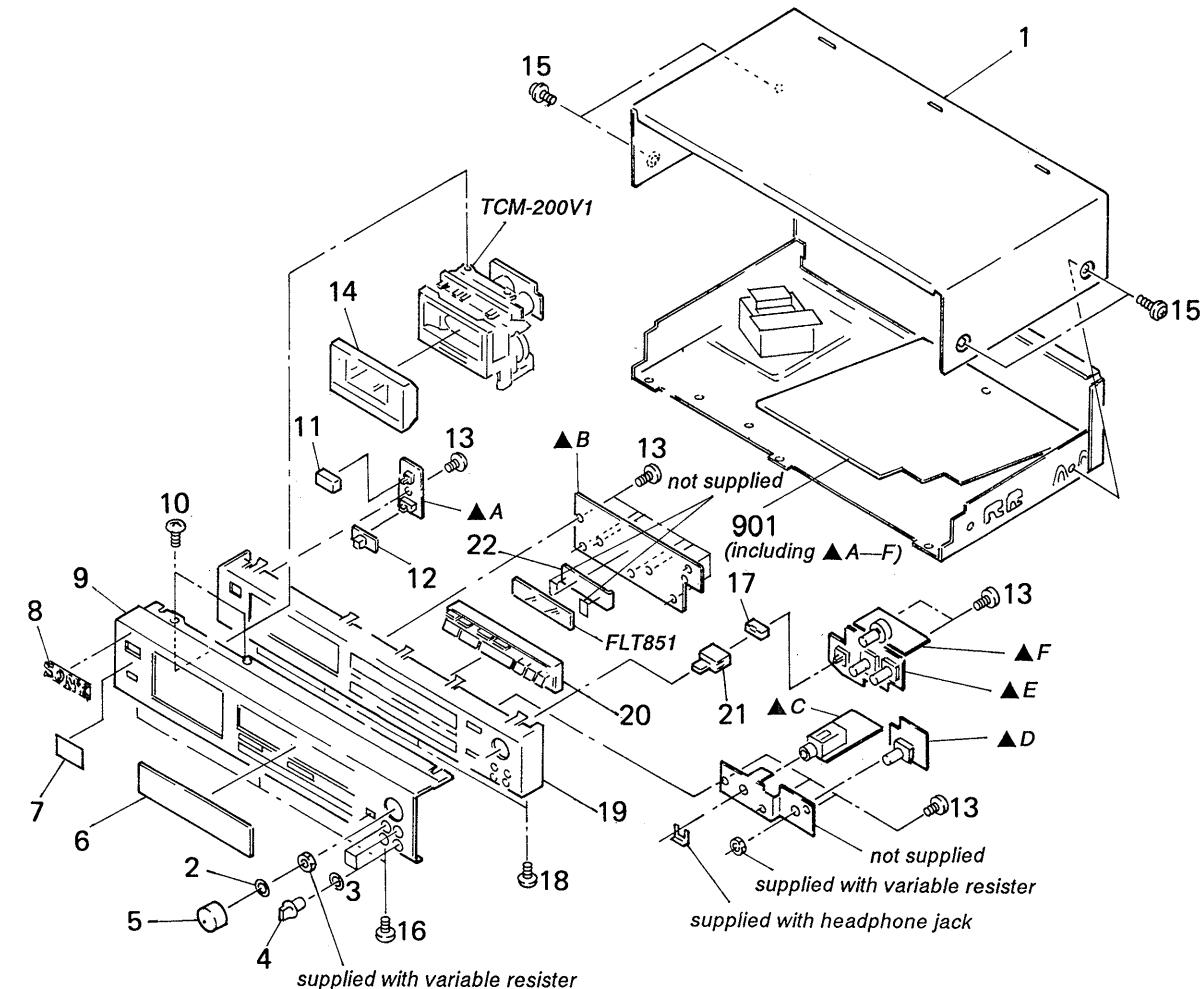**(1) CABINET SECTION**

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	3-332-578-61	CASE		13	4-928-635-01	SCREW, +BV (2.6X8) TAPPING	
2	3-350-440-01	SPRING		14	X-3304-977-1	LID ASSY, CASSETTE	
3	3-356-957-01	SPRING		15	3-704-366-01	SCREW (CASE) (M3X8)	
4	3-350-495-01	KNOB (VOL)		16	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	
5	X-3304-973-1	KNOB (R) ASSY		17	4-864-307-00	RING	
6	3-350-838-21	WINDOW (M)		18	7-682-548-09	SCREW +BVTT 3X8 (S)	
7	*3-703-710-41	STICKER, SONY SYMBOL (12)		19	3-350-842-11	PANEL (BASE)	
8	4-908-848-01	EMBLEM, SONY		20	3-356-975-11	BUTTON	
9	3-356-977-51 3-356-977-61	(AEP, UK, WG)...PANEL, FRONT (Canadian)....PANEL, FRONT		21	3-304-926-11	KNOB (A), PUSH	
10	7-682-547-04	SCREW +BVTT 3X6 (S)		22	*3-350-824-01	HOLDER (FL)	
11	4-922-921-01	BUTTON (POWER)		901	*A-2006-272-A	MOUNTED PCB, MAIN	
12	4-931-421-11	KNOB (T & S)					

(2) PANEL SECTION

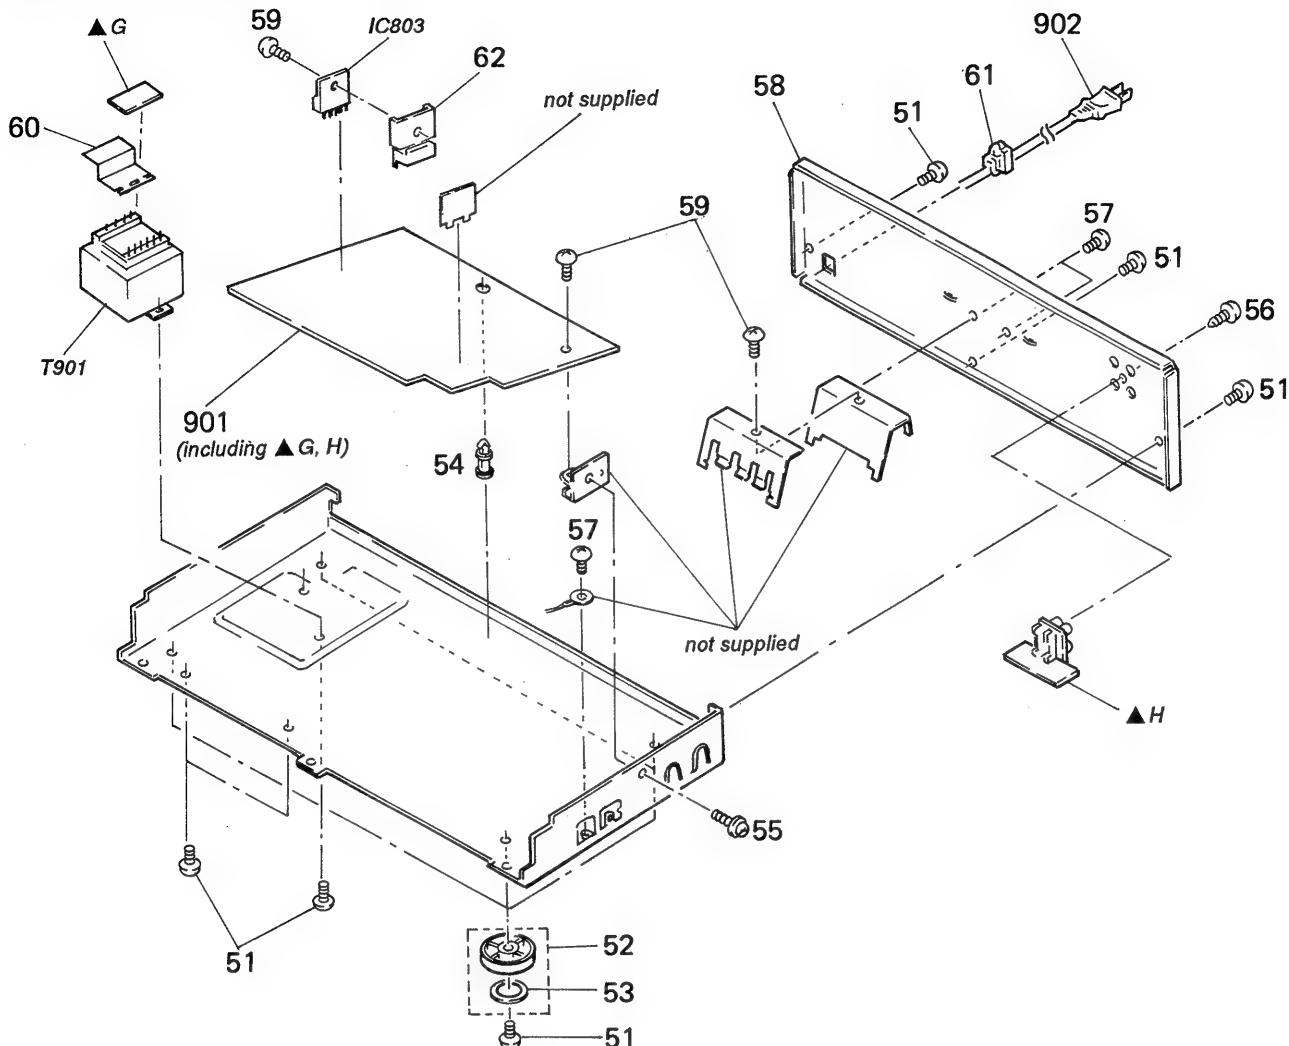


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks	
51	7-682-548-09	SCREW +BVTT 3X8 (S)		61	*3-703-244-00	(AEP,UK,WG).....BUSHING (2104), CORD		
52	X-3304-938-2	FOOT ASSY			*3-703-571-12	(Canadian) ...BUSHING (S)(4516), CORD		
53	4-923-836-11	CUSHION		62	*3-356-925-01	HEAT SINK		
54	*3-669-610-00	SPACER		902	▲.1-551-506-XX	(Canadian)...CORD, POWER		
55	3-704-366-31	SCREW (CASE) (M3X6)			▲.1-555-795-00	(AEP,WG)....CORD, POWER		
56	7-621-849-00	SCREW, TAPPING			▲.1-556-035-00	(UK).....CORD, POWER		
57	7-682-547-09	SCREW +BVTT 3X6 (S)		T901	▲.1-450-099-11	(AEP,UK,WG)...TRANSFORMER, POWER		
58	*3-356-980-21	(UK).....PANEL, BACK			T901	▲.1-450-100-11	(Canadian)...TRANSFORMER, POWER	
	*3-356-980-11	(AEP,UK).....PANEL, BACK						
	*3-356-980-31	(Canadian)....PANEL, BACK						
59	7-682-547-04	SCREW +BVTT 3X6 (S)						
60	*3-337-136-11	COVER, TRANSFORMER SAFETY						

**Note:**  
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.


**Note:**  
Les composants identifiés par une marque ▲ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

(3) MECHANISM SECTION ① (TCM-200V1)

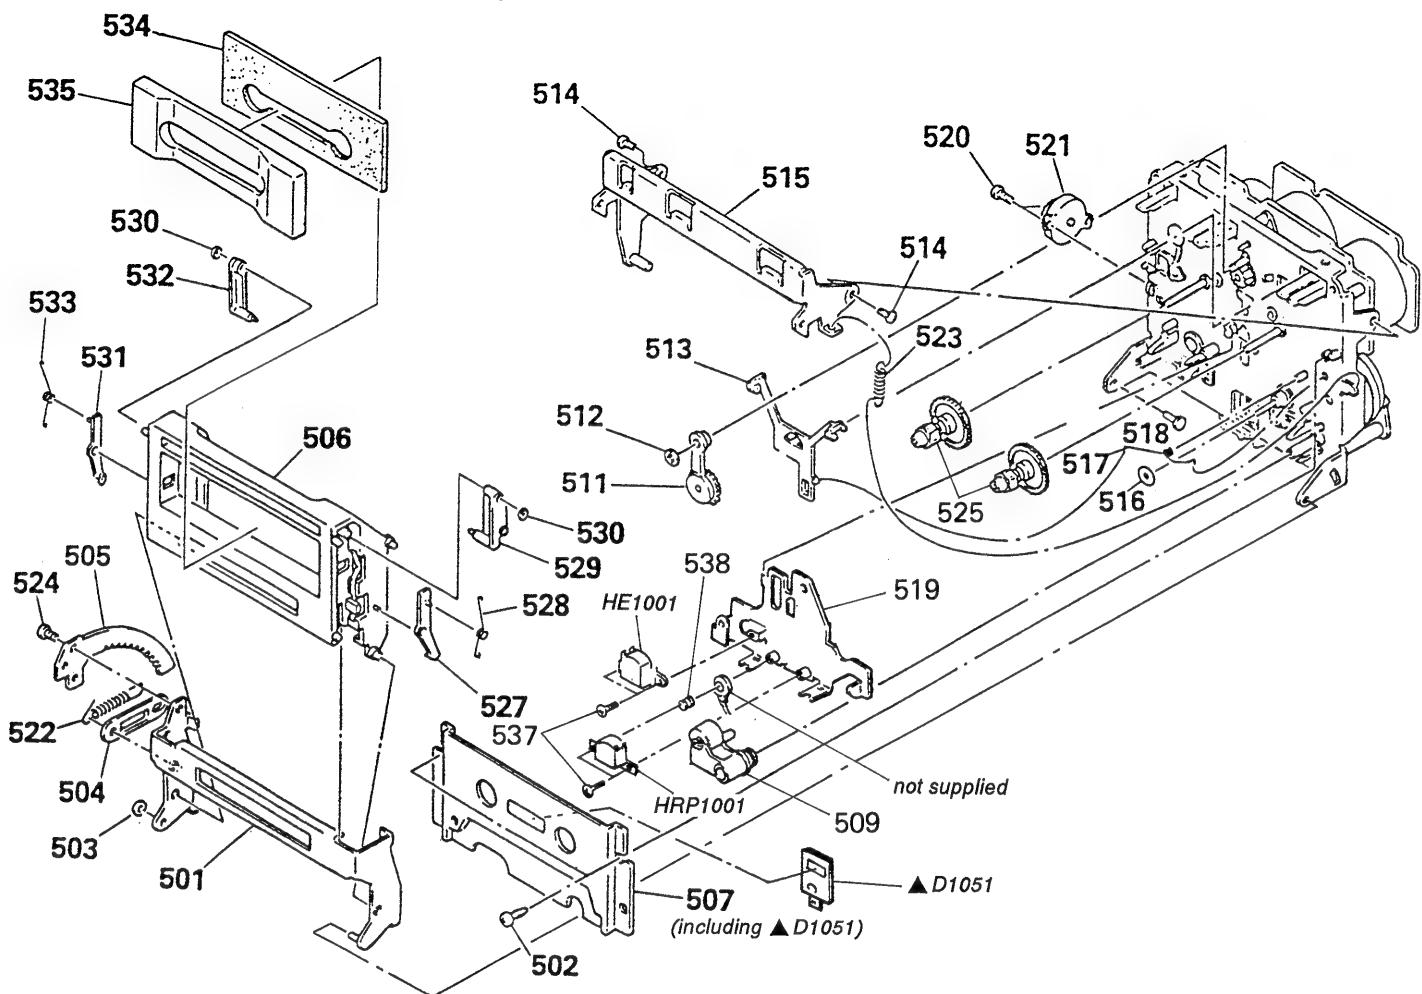

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
501	X-3356-612-1	HOLDER (B) ASSY, CASSETTE		521	3-712-786-01	DAMPER, OIL	
502	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S		522	3-356-626-01	SPRING, TENSION	
503	3-558-708-21	WASHER, STOPPER		523	3-356-625-01	SPRING, TENSION	
504	*3-356-717-01	LEVER (JOINT)		524	7-621-775-10	SCREW +B 2.6X4	
505	3-356-708-01	GEAR (SOFT EJECT)		525	X-3356-627-1	GEAR ASSY	
506	X-3356-611-1	HOLDER (A) ASSY, CASSETTE		527	3-356-930-01	LEVER (RA)	
507	X-3356-613-1	PLATE ASSY, ORNAMENTAL		528	3-356-926-01	SPRING (RIGHT), TORSION	
509	X-3356-649-1	LEVER (PINCH LEVER T) ASSY		529	3-356-931-01	LEVER (RB)	
511	X-3356-641-1	LEVER (FR2) ASSY		530	3-356-946-01	BUSHING	
512	3-669-465-00	WASHER (1.5), STOPPER		531	3-356-932-01	LEVER (LA)	
513	3-356-614-01	SLIDER (BRAKE)		532	3-356-933-01	LEVER (LB)	
514	3-356-601-11	SCREW, STEP		533	3-356-927-01	SPRING (LEFT), TORSION	
515	*X-3356-608-1	LEVER (LIFTER) ASSY		534	3-356-731-01	ABSORBENT, VIBRATION	
516	3-356-713-01	WASHER		535	3-356-928-01	PLATE (A), ORNAMENTAL	
517	3-356-619-01	SPRING (B), TORSION		537	7-621-772-20	SCREW +B 2X5	
518	3-356-710-01	SHAFT (LEFT) (CASSETTE HOLDER)		538	3-362-238-01	SPRING (VH), COMPRESSION	
519	X-3356-647-1	SLIDER (HEAD CHASSIS V1) ASSY		D1051	8-719-980-85	DIODE SLF-325C	
520	7-621-255-20	SCREW +BVTT 2X4 (S)		HE1001	1-543-535-11	HEAD, MAGNETIC (ERASE)	
					HRP1001	1-543-537-11	HEAD, MAGNETIC (REC/PB)

(4) MECHANISM SECTION② (TCM-200V1)

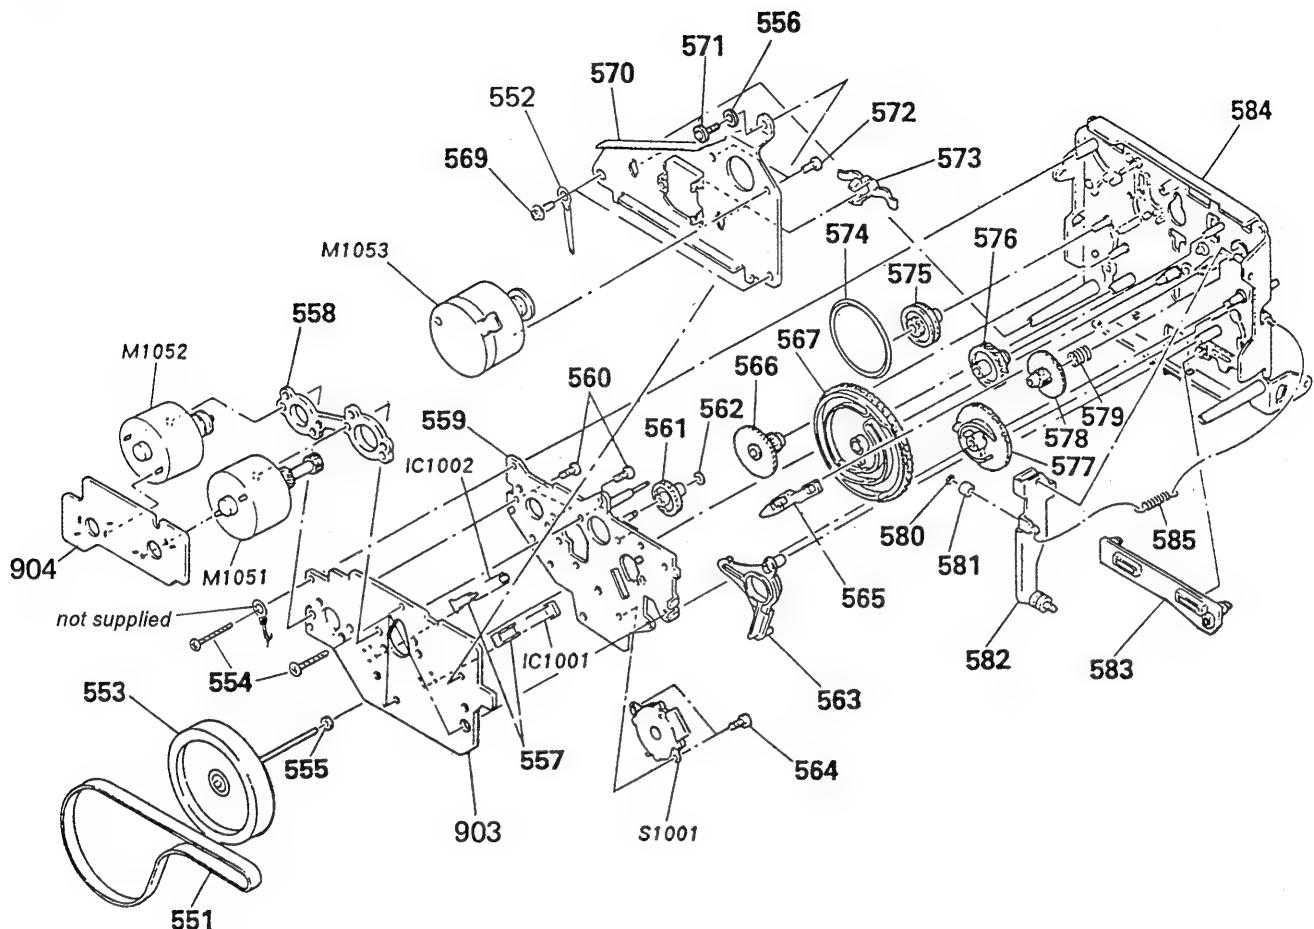

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
551	3-356-744-01	BELT (CAPSTAN V)		572	7-621-775-00	SCREW +B 2.6X3	
552	*3-701-822-00	HOLDER, WIRE		573	3-575-321-00	RETAINER, THRUST, CAPSTAN	
553	X-3356-642-1	FLYWHEEL (R FWD) ASSY		574	3-356-603-01	BELT (MODE)	
554	3-355-801-01	SCREW (BTP 2X18)		575	3-356-607-01	PULLEY (MODE)	
555	3-356-705-01	WASHER (CAPSTAN)		576	3-356-703-01	GEAR (COMMUNICATION C)	
556	*3-356-718-01	SPACER (THRUST RETAINER R)		577	3-356-616-01	GEAR (LOADING CAM)	
557	3-356-631-01	HOLDER (SENSOR)		578	3-356-609-01	GEAR (LOADING)	
558	*3-356-628-01	SPACER (MOTOR)		579	3-356-605-01	SPRING, COMPRESSION	
559	*X-3356-602-4	BRACKET (MOTOR R) ASSY		580	3-558-708-11	WASHER, STOPPER	
560	7-621-773-95	SCREW +B 2.6X6		581	3-356-630-01	ROLLER (LOADING)	
561	3-356-702-01	GEAR (COMMUNICATION B)		582	*X-3356-606-1	LEVER (LOADING) ASSY	
562	3-669-465-00	WASHER (1.5), STOPPER		583	3-356-653-01	SLIDER (PAUSE)	
563	3-356-613-01	LEVER (MODE)		584	X-3356-644-1	CHASSIS COMPLETE ASSY, MECH	
564	7-621-772-20	SCREW +B 2X5		585	3-356-624-01	SPRING, TENSION	
565	3-356-617-01	LEVER (SELECTION)		903	*1-632-740-11	PC BOARD, MD	
566	3-356-606-01	GEAR (MODE)		904	*1-632-741-11	PC BOARD, REAL MOTOR	
567	3-356-747-01	GEAR (MODE CAM C)		M1051	X-3356-638-1	MOTOR (REEL R) ASSY	
569	7-685-132-19	SCREW +BTP 2.6X5 TYPE2 N-S		M1052	X-3356-604-1	MOTOR (ASSIST) ASSY	
570	*3-356-629-01	BRACKET (THRUST RETAINER R)		M1053	X-3356-646-1	MOTOR (CAPSTAN V1) ASSY	
571	3-356-707-01	SCREW (+PTPWH 2X25)		S1001	1-466-238-11	ENCODER, ROTARY	

# SECTION 7

## ELECTRICAL PARTS LIST

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

**CAPACITORS:**MF:  $\mu$ F, PF:  $\mu\mu$ F.**RESISTORS**

- All resistors are in ohms.
- F: nonflammable

**COILS**

- MMH: mH, UH:  $\mu$ H

**SEMICONDUCTORS**

In each case, U:  $\mu$ , for example:  
 UA...:  $\mu$ A..., UPA...:  $\mu$ PA...,  
 UPC...:  $\mu$ PC, UPD...:  $\mu$ PD...

The components identified by mark or dotted line with mark are critical for safety.  
 Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité.  
 Ne les remplacer que par une pièce portant le numéro spécifié.

- WG: West Germany model

Ref.No.	Part No.	Description					Ref.No.	Part No.	Description				
901	*A-2006-272-A	OUNTED PCB, MAIN					C217	1-130-475-00	YLAR	0.0022MF	5%	50V	
902	△.1-551-506-XX	(Canadian)...CORD, POWER					C218	1-136-174-00	FILM	0.56MF	5%	50V	
	△.1-555-795-00	(AEP,WG)....CORD, POWER					C219	1-136-171-00	FILM	0.33MF	5%	50V	
	△.1-556-035-00	(UK).....CORD, POWER					C220	1-123-875-11	ELECT	10MF	20%	50V	
903	*1-632-740-11	PC BOARD, MD					C221	1-123-875-11	ELECT	10MF	20%	50V	
904	*1-632-741-11	PC BOARD, REAL MOTOR					C266	1-124-902-00	ELECT	0.47MF	20%	50V	
C101	1-130-468-00	YLAR	560PF	5%	50V		C267	1-123-875-11	ELECT	10MF	20%	50V	
C102	1-130-488-00	YLAR	0.027MF	5%	50V		C268	1-162-284-31	CERAMIC	150PF	10%	50V	
C103	1-124-657-00	ELECT	10MF	20%	50V		C269	1-136-273-91	FILM	75PF	5%	630V	
C104	1-130-488-00	YLAR	0.027MF	5%	50V		C270	1-136-165-00	FILM	0.1MF	5%	50V	
C105	1-161-494-00	CERAMIC	0.022MF	25V			C271	1-136-157-00	FILM	0.022MF	5%	50V	
C110	1-123-875-11	ELECT	10MF	20%	50V		C272	1-136-153-00	FILM	0.01MF	5%	50V	
C111	1-123-382-00	ELECT	3.3MF	20%	50V		C273	1-130-472-00	YLAR	0.0012MF	5%	50V	
C112	1-162-294-31	CERAMIC	0.001MF	10%	50V		C274	1-136-433-11	FILM	100PF	5%	630V	
C113	1-123-875-11	ELECT	10MF	20%	50V		C275	1-136-433-11	FILM	100PF	5%	630V	
C114	1-161-375-00	CERAMIC	0.0022MF	20%	16V		C501	1-124-443-00	ELECT	100MF	20%	10V	
C115	1-126-233-11	ELECT	22MF	20%	25V		C502	1-124-443-00	ELECT	100MF	20%	10V	
C116	1-130-475-00	YLAR	0.0022MF	5%	50V		C503	1-123-875-11	ELECT	10MF	20%	50V	
C117	1-130-475-00	YLAR	0.0022MF	5%	50V		C504	1-123-875-11	ELECT	10MF	20%	50V	
C118	1-136-174-00	FILM	0.56MF	5%	50V		C505	1-124-443-00	ELECT	100MF	20%	10V	
C119	1-136-171-00	FILM	0.33MF	5%	50V		C506	1-124-443-00	ELECT	100MF	20%	10V	
C120	1-123-875-11	ELECT	10MF	20%	50V		C507	1-162-217-31	CERAMIC	56PF	5%	50V	
C121	1-123-875-11	ELECT	10MF	20%	50V		C508	1-161-494-00	CERAMIC	0.022MF	25V		
C166	1-124-902-00	ELECT	0.47MF	20%	50V		C510	1-161-494-00	CERAMIC	0.022MF	30%	25V	
C167	1-123-875-11	ELECT	10MF	20%	50V		C511	1-162-217-31	CERAMIC	56PF	5%	50V	
C168	1-162-284-31	CERAMIC	150PF	10%	50V		C512	1-124-925-11	ELECT	2.2MF	20%	50V	
C169	1-136-273-91	FILM	75PF	5%	630V		C513	1-124-925-11	ELECT	2.2MF	20%	50V	
C170	1-136-165-00	FILM	0.1MF	5%	50V		C514	1-124-477-11	ELECT	47MF	20%	16V	
C171	1-136-157-00	FILM	0.022MF	5%	50V		C515	1-124-446-11	ELECT	47MF	20%	10V	
C172	1-136-153-00	FILM	0.01MF	5%	50V		C516	1-124-902-00	ELECT	0.47MF	20%	50V	
C173	1-130-472-00	YLAR	0.0012MF	5%	50V		C517	1-136-593-11	FILM	0.0033MF	5%	100V	
C174	1-136-433-11	FILM	100PF	5%	630V		C518	1-136-593-11	FILM	0.0033MF	5%	100V	
C175	1-136-433-11	FILM	100PF	5%	630V		C519	1-130-848-00	FILM	0.0082MF	5%	100V	
C201	1-130-468-00	YLAR	560PF	5%	50V		C520	1-136-601-11	FILM	0.01MF	5%	630V	
C202	1-130-488-00	YLAR	0.027MF	5%	50V		C521	1-107-045-00	MICA	3.9PF	0.5PF	500V	
C203	1-124-657-00	ELECT	10MF	20%	50V		C522	1-123-875-11	ELECT	10MF	20%	50V	
C204	1-130-488-00	YLAR	0.027MF	5%	50V		C523	1-123-875-11	ELECT	10MF	20%	50V	
C205	1-161-494-00	CERAMIC	0.022MF	25V			C524	1-124-791-11	ELECT	1MF	20%	50V	
C210	1-123-875-11	ELECT	10MF	20%	50V		C526	1-123-875-11	ELECT	10MF	20%	50V	
C211	1-123-382-00	ELECT	3.3MF	20%	50V		C527	1-123-875-11	ELECT	10MF	20%	50V	
C212	1-162-294-31	CERAMIC	0.001MF	10%	50V		C528	1-124-927-11	ELECT	4.7MF	20%	50V	
C213	1-123-875-11	ELECT	10MF	20%	50V		C529	1-126-233-11	ELECT	22MF	20%	25V	
C214	1-161-375-00	CERAMIC	0.0022MF	20%	16V		C530	1-126-101-11	ELECT	100MF	20%	16V	
C215	1-126-233-11	ELECT	22MF	20%	25V		C531	1-126-101-11	ELECT	100MF	20%	16V	
C216	1-130-475-00	YLAR	0.0022MF	5%	50V		C532	1-161-494-00	CERAMIC	0.022MF	25V		

Ref.No.	Part No.	Description			Ref.No.	Part No.	Description	
C533	1-123-875-11	ELECT	10MF	20%	50V	D101	8-719-107-94	DIODE 1SS202-1
C534	1-124-902-00	ELECT	0.47MF	20%	50V	D201	8-719-107-94	DIODE 1SS202-1
C535	1-124-902-00	ELECT	0.47MF	20%	50V	D501	8-719-107-94	DIODE 1SS202-1
C536	1-124-902-00	ELECT	0.47MF	20%	50V	D502	8-719-107-94	DIODE 1SS202-1
C703	1-124-556-11	ELECT	2200MF	20%	16V	D503	8-719-107-94	DIODE 1SS202-1
C704	1-124-556-11	ELECT	2200MF	20%	16V	D504	8-719-107-94	DIODE 1SS202-1
C705	1-124-477-11	ELECT	47MF	20%	16V	D505	8-719-107-94	DIODE 1SS202-1
C706	1-124-477-11	ELECT	47MF	20%	16V	D506	8-719-107-94	DIODE 1SS202-1
C707	1-124-477-11	ELECT	47MF	20%	16V	D509	8-719-107-94	DIODE 1SS202-1
C708	1-124-473-11	ELECT	1000MF	20%	10V	D510	8-719-107-94	DIODE 1SS202-1
C709	1-124-473-11	ELECT	1000MF	20%	10V	D511	8-719-107-94	DIODE 1SS202-1
C710	1-124-927-11	ELECT	4.7MF	20%	50V	D512	8-719-107-94	DIODE 1SS202-1
C711	1-124-360-00	ELECT	1000MF	20%	16V	D513	8-719-107-94	DIODE 1SS202-1
C712	1-124-122-11	ELECT	100MF	20%	50V	D701	8-719-200-77	DIODE 10E2N
C713	1-124-910-11	ELECT	47MF	20%	35V	D702	8-719-200-77	DIODE 10E2N
C714	1-164-159-11	CERAMIC	0.1MF		50V	D703	8-719-200-77	DIODE 10E2N
C715	1-124-564-11	ELECT	4700MF	20%	25V	D704	8-719-200-77	DIODE 10E2N
C718	1-123-875-11	ELECT	10MF	20%	50V	D706	8-719-107-94	DIODE 1SS202-1
C720	1-124-887-00	ELECT	3300MF	20%	16V	D707	8-719-200-77	DIODE 10E2N
C721	1-124-927-11	ELECT	4.7MF	20%	50V	D708	8-719-933-33	DIODE HZS6A1L
C722	1-124-473-11	ELECT	1000MF	20%	10V	D709	8-719-933-33	DIODE HZS6A1L
C723	1-124-893-11	ELECT	2200MF	20%	6.3V	D710	8-719-933-41	DIODE HZS6C3L
C801	1-162-294-31	CERAMIC	0.001MF	10%	50V	D711	8-719-200-77	DIODE 10E2N
C802	1-162-294-31	CERAMIC	0.001MF	10%	50V	D712	8-719-200-77	DIODE 10E2N
C803	1-124-902-00	ELECT	0.47MF	20%	50V	D713	8-719-200-77	DIODE 10E2N
C804	1-164-159-11	CERAMIC	0.1MF		50V	D714	8-719-200-77	DIODE 10E2N
C805	1-164-159-11	CERAMIC	0.1MF		50V	D715	8-719-200-77	DIODE 10E2N
C806	1-124-477-11	ELECT	47MF	20%	16V	D716	8-719-200-77	DIODE 10E2N
C808	1-124-446-11	ELECT	47MF	20%	10V	D717	8-719-107-94	DIODE 1SS202-1
C809	1-123-875-11	ELECT	10MF	20%	50V	D719	8-719-107-94	DIODE 1SS202-1
C810	1-161-494-00	CERAMIC	0.022MF		25V	D720	8-719-001-79	DIODE UZL-12H1
C811	1-124-927-11	ELECT	4.7MF	20%	50V	D721	8-719-000-93	DIODE UZL-7H1
C812	1-161-494-00	CERAMIC	0.022MF		25V	D722	8-719-107-94	DIODE 1SS202-1
C814	1-161-494-00	CERAMIC	0.022MF	30%	25V	D723	8-719-107-94	DIODE 1SS202-1
C816	1-162-294-31	CERAMIC	0.001MF	10%	50V	D724	8-719-933-33	DIODE HZS6A1L
C853	1-123-875-11	ELECT	10MF	20%	50V	D801	8-719-107-94	DIODE 1SS202-1
C1051	1-123-875-11	ELECT	10MF	20%	50V	D802	8-719-107-94	DIODE 1SS202-1
C1052	1-123-875-11	ELECT	10MF	20%	50V	D803	8-719-107-94	DIODE 1SS202-1
C1053	1-164-159-11	CERAMIC	0.1MF		50V	D804	8-719-107-94	DIODE 1SS202-1
CN1001	1-506-615-11	PIN, CONNECTOR 9P				D805	8-719-107-94	DIODE 1SS202-1
CN1002	1-564-501-11	PIN, CONNECTOR 8P				D808	8-719-107-94	DIODE 1SS202-1
CN1051*	1-564-499-11	PIN, CONNECTOR 6P				D809	8-719-107-94	DIODE 1SS202-1
CN1052*	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P				D811	8-719-107-94	DIODE 1SS202-1
CN1053*	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P				D812	8-719-107-94	DIODE 1SS202-1
CND507*	1-564-337-71	PIN, CONNECTOR 3P				D813	8-719-107-94	DIODE 1SS202-1
CND508*	1-564-337-51	PIN, CONNECTOR 3P				D814	8-719-107-94	DIODE 1SS202-1
CND509*	1-564-338-00	PIN, CONNECTOR 4P				D815	8-719-107-94	DIODE 1SS202-1
CND510*	1-564-337-00	PIN, CONNECTOR 3P				D818	8-719-107-94	DIODE 1SS202-1
CND801*	1-564-338-71	PIN, CONNECTOR 4P				D819	8-719-107-94	DIODE 1SS202-1
CND802*	1-564-337-81	PIN, CONNECTOR 3P				D820	8-719-107-94	DIODE 1SS202-1
CND803*	1-564-339-00	PIN, CONNECTOR 5P				D1051	8-719-980-85	DIODE SLF-325C
CNE501*	1-564-509-11	PLUG, CONNECTOR 6P				FLT851	1-519-596-11	INDICATOR TUBE, FLUORESCENT
CNE502*	1-564-506-11	PLUG, CONNECTOR 3P				HE1001	1-543-535-11	HEAD, MAGNETIC (ERASE)
CNE503*	1-564-506-11	PLUG, CONNECTOR 3P				HRP1001	1-543-537-11	HEAD, MAGNETIC (REC/PB)
CNE506*	1-564-506-11	PLUG, CONNECTOR 3P						
CNE804*	1-564-506-11	PLUG, CONNECTOR 3P						
CNE805*	1-564-505-11	PLUG, CONNECTOR 2P						
CNN701*	1-508-882-00	BASE POST						

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
IC501	8-759-111-44	IC UPC4570C-1	Q709	8-729-900-61	TRANSISTOR DTA114ES
IC502	8-759-634-51	IC M5218AP	Q710	8-729-920-98	TRANSISTOR 2SD1761-EF
IC503	8-759-945-58	IC RC4558P	Q711	8-729-620-05	TRANSISTOR 2SC2603-EF
IC504	8-759-945-58	IC RC4558P	Q712	8-729-900-80	TRANSISTOR DTC114ES
IC505	8-752-036-34	IC CXA1330S	Q801	8-729-900-61	TRANSISTOR DTA114ES
IC506	8-752-038-02	IC CXA1198AP	Q802	8-729-900-61	TRANSISTOR DTA114ES
IC507	8-759-106-56	IC UPC1297CA	Q803	8-729-900-61	TRANSISTOR DTA114ES
IC701	8-759-945-58	IC RC4558P	Q804	8-729-900-61	TRANSISTOR DTA114ES
IC801	8-759-634-99	IC M50941-354SP	Q805	8-729-119-76	TRANSISTOR 2SA1175-HFE
IC802	8-759-240-69	IC TC4069UBP	Q806	8-729-119-76	TRANSISTOR 2SA1175-HFE
IC803	8-759-973-95	IC BA6219B	Q807	8-729-900-61	TRANSISTOR DTA114ES
IC804	8-759-822-09	IC LB1641	Q808	8-729-900-61	TRANSISTOR DTA114ES
IC851	8-741-100-48	IC SBX1610-59	Q809	8-729-620-05	TRANSISTOR 2SC2603-EF
IC1001	8-749-920-97	PHOTO REFLECTOR GP2S22B	Q810	8-729-620-05	TRANSISTOR 2SC2603-EF
IC1002	8-749-920-97	PHOTO REFLECTOR GP2S22B	Q811	8-729-900-61	TRANSISTOR DTA114ES
J501	1-565-258-11	JACK, PIN 4P (LINE IN/LINE OUT)	Q812	8-729-900-80	TRANSISTOR DTC114ES
J502	1-507-796-71	JACK (HEADPHONES)	Q813	8-729-900-80	TRANSISTOR DTC114ES
L101	1-410-780-11	INDUCTOR 27MMH	Q814	8-729-620-05	TRANSISTOR 2SC2603-EF
L201	1-410-780-11	INDUCTOR 27MMH	Q815	8-729-620-05	TRANSISTOR 2SC2603-EF
L501	1-408-080-00	INDUCTOR 100UH	Q851	8-729-900-61	TRANSISTOR DTA114ES
LPF101	1-231-388-00	FILTER, LOW PASS	Q853	8-729-900-61	TRANSISTOR DTA114ES
LPF201	1-231-388-00	FILTER, LOW PASS	Q854	8-729-900-61	TRANSISTOR DTA114ES
M1051	X-3356-638-1	MOTOR (REEL R) ASSY	Q855	8-729-900-61	TRANSISTOR DTA114ES
M1052	X-3356-604-1	MOTOR (ASSIST) ASSY	Q856	8-729-900-61	TRANSISTOR DTA114ES
M1053	X-3356-646-1	MOTOR (CAPSTAN V1) ASSY	Q857	8-729-900-61	TRANSISTOR DTA114ES
Q101	8-729-900-74	TRANSISTOR DTC143TS	Q858	8-729-900-61	TRANSISTOR DTA114ES
Q102	8-729-900-80	TRANSISTOR DTC114ES	R101	1-247-891-00	CARBON 330K 5% 1/4W
Q103	8-729-142-25	TRANSISTOR 2SD1020-HFE	R102	1-249-403-11	CARBON 68 5% 1/4W
Q104	8-729-620-05	TRANSISTOR 2SC2603-EF	R103	1-247-882-11	CARBON 130K 5% 1/4W
Q201	8-729-900-74	TRANSISTOR DTC143TS	R104	1-247-848-11	CARBON 5.1K 5% 1/4W
Q202	8-729-900-80	TRANSISTOR DTC114ES	R105	1-249-421-11	CARBON 2.2K 5% 1/4W
Q203	8-729-142-25	TRANSISTOR 2SD1020-HFE	R106	1-247-840-00	CARBON 2.4K 5% 1/4W
Q204	8-729-620-05	TRANSISTOR 2SC2603-EF	R107	1-247-887-00	CARBON 220K 5% 1/4W
Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE	R109	1-249-421-11	CARBON 2.2K 5% 1/4W
Q502	8-729-620-05	TRANSISTOR 2SC2603-EF	R110	1-249-433-11	CARBON 22K 5% 1/4W
Q503	8-729-900-61	TRANSISTOR DTA114ES	R111	1-249-417-11	CARBON 1K 5% 1/4W
Q504	8-729-900-80	TRANSISTOR DTC114ES	R112	1-249-429-11	CARBON 10K 5% 1/4W
Q505	8-729-900-61	TRANSISTOR DTA114ES	R113	1-249-421-11	CARBON 2.2K 5% 1/4W
Q506	8-729-821-04	TRANSISTOR 2SA1317-STU	R114	1-249-421-11	CARBON 2.2K 5% 1/4W
Q511	8-729-900-74	TRANSISTOR DTC143TS	R115	1-249-409-11	CARBON 220 5% 1/4W
Q512	8-729-900-74	TRANSISTOR DTC143TS	R116	1-249-434-11	CARBON 27K 5% 1/4W
Q513	8-729-900-74	TRANSISTOR DTC143TS	R117	1-247-868-11	CARBON 36K 5% 1/4W
Q515	8-729-900-80	TRANSISTOR DTC114ES	R118	1-247-862-11	CARBON 20K 5% 1/4W
Q516	8-729-900-80	TRANSISTOR DTC114ES	R119	1-249-408-11	CARBON 180 5% 1/4W
Q518	8-729-900-80	TRANSISTOR DTC114ES	R120	1-249-441-11	CARBON 100K 5% 1/4W
Q519	8-729-194-57	TRANSISTOR 2SC945-P	R121	1-249-423-11	CARBON 3.3K 5% 1/4W
Q520	8-729-194-57	TRANSISTOR 2SC945-P	R122	1-249-441-11	CARBON 100K 5% 1/4W
Q701	8-729-900-80	TRANSISTOR DTC114ES	R123	1-249-428-11	CARBON 8.2K 5% 1/4W
Q702	8-729-920-97	TRANSISTOR 2SB1187-EF	R124	1-249-421-11	CARBON 2.2K 5% 1/4W
Q703	8-729-920-98	TRANSISTOR 2SD1761-EF	R125	1-249-428-11	CARBON 8.2K 5% 1/4W
Q704	8-729-922-37	TRANSISTOR 2SD2144S	R126	1-247-864-11	CARBON 24K 5% 1/4W
Q705	8-729-920-98	TRANSISTOR 2SD1761-EF	R127	1-249-414-11	CARBON 560 5% 1/4W
Q706	8-729-141-32	TRANSISTOR 2SA1409TP	R130	1-249-421-11	CARBON 2.2K 5% 1/4W
Q707	8-729-140-04	TRANSISTOR 2SB1116A-L	R161	1-249-429-11	CARBON 10K 5% 1/4W
Q708	8-729-900-80	TRANSISTOR DTC114ES	R162	1-249-425-11	CARBON 4.7K 5% 1/4W
			R163	1-249-421-11	CARBON 2.2K 5% 1/4W

Ref.No.	Part No.	Description			Ref.No.	Part No.	Description				
R164	1-249-421-11	CARBON	2.2K	5%	1/4W	R516	1-249-441-11	CARBON	100K	5%	1/4W
R166	1-249-430-11	CARBON	12K	5%	1/4W	R517	1-249-429-11	CARBON	10K	5%	1/4W
R167	1-249-431-11	CARBON	15K	5%	1/4W	R518	1-249-429-11	CARBON	10K	5%	1/4W
R168	1-249-432-11	CARBON	18K	5%	1/4W	R519	1-249-417-11	CARBON	1K	5%	1/4W
R169	1-249-393-11	CARBON	10	5%	1/4W	R520	1-249-441-11	CARBON	100K	5%	1/4W
R170	1-247-883-00	CARBON	150K	5%	1/4W	R521	1-249-425-11	CARBON	4.7K	5%	1/4W
R173	1-249-429-11	CARBON	10K	5%	1/4W	R522	1-247-864-11	CARBON	24K	5%	1/4W
R201	1-247-891-00	CARBON	330K	5%	1/4W	R523	1-249-429-11	CARBON	10K	5%	1/4W
R202	1-249-403-11	CARBON	68	5%	1/4W	R524	1-249-431-11	CARBON	15K	5%	1/4W
R203	1-247-882-11	CARBON	130K	5%	1/4W	R525	1-249-421-11	CARBON	2.2K	5%	1/4W
R204	1-247-848-11	CARBON	5.1K	5%	1/4W	R526	1-247-842-11	CARBON	3K	5%	1/4W
R205	1-249-421-11	CARBON	2.2K	5%	1/4W	R527	1-249-438-11	CARBON	56K	5%	1/4W
R206	1-247-840-00	CARBON	2.4K	5%	1/4W	R528	1-249-438-11	CARBON	56K	5%	1/4W
R207	1-247-887-00	CARBON	220K	5%	1/4W	R530	1-249-441-11	CARBON	100K	5%	1/4W
R209	1-249-421-11	CARBON	2.2K	5%	1/4W	R531	1-247-876-11	CARBON	75K	5%	1/4W
R210	1-249-433-11	CARBON	22K	5%	1/4W	R532	1-249-390-11	CARBON	5.6	5%	1/4W
R211	1-249-417-11	CARBON	1K	5%	1/4W	R533	1-249-390-11	CARBON	-5.6	5%	1/4W
R212	1-249-429-11	CARBON	10K	5%	1/4W	R534	1-249-413-11	CARBON	470	5%	1/4W
R213	1-249-421-11	CARBON	2.2K	5%	1/4W	R535	1-249-413-11	CARBON	470	5%	1/4W
R214	1-249-421-11	CARBON	2.2K	5%	1/4W	R537	1-249-403-11	CARBON	68	5%	1/4W
R215	1-249-409-11	CARBON	220	5%	1/4W	R538	1-249-427-11	CARBON	6.8K	5%	1/4W
R216	1-249-434-11	CARBON	27K	5%	1/4W	R539	1-249-417-11	CARBON	1K	5%	1/4W
R217	1-247-868-11	CARBON	36K	5%	1/4W	R540	1-249-434-11	CARBON	27K	5%	1/4W
R218	1-247-862-11	CARBON	20K	5%	1/4W	R541	1-247-844-11	CARBON	3.6K	5%	1/4W
R219	1-249-408-11	CARBON	180	5%	1/4W	R542	1-249-435-11	CARBON	33K	5%	1/4W
R220	1-249-441-11	CARBON	100K	5%	1/4W	R543	1-247-858-11	CARBON	13K	5%	1/4W
R221	1-249-423-11	CARBON	3.3K	5%	1/4W	R544	1-247-872-11	CARBON	51K	5%	1/4W
R222	1-249-441-11	CARBON	100K	5%	1/4W	R545	1-249-438-11	CARBON	56K	5%	1/4W
R223	1-249-428-11	CARBON	8.2K	5%	1/4W	R546	1-247-884-11	CARBON	160K	5%	1/4W
R224	1-249-421-11	CARBON	2.2K	5%	1/4W	R547	1-247-882-11	CARBON	130K	5%	1/4W
R225	1-249-428-11	CARBON	8.2K	5%	1/4W	R548	1-247-868-11	CARBON	36K	5%	1/4W
R226	1-247-864-11	CARBON	24K	5%	1/4W	R549	1-249-438-11	CARBON	56K	5%	1/4W
R227	1-249-414-11	CARBON	560	5%	1/4W	R550	1-247-891-00	CARBON	330K	5%	1/4W
R230	1-249-421-11	CARBON	2.2K	5%	1/4W	R551	1-247-872-11	CARBON	51K	5%	1/4W
R261	1-249-429-11	CARBON	10K	5%	1/4W	R552	1-247-884-11	CARBON	160K	5%	1/4W
R262	1-249-425-11	CARBON	4.7K	5%	1/4W	R553	1-247-890-11	CARBON	300K	5%	1/4W
R263	1-249-421-11	CARBON	2.2K	5%	1/4W	R554	1-249-437-11	CARBON	47K	5%	1/4W
R264	1-249-421-11	CARBON	2.2K	5%	1/4W	R555	1-247-874-11	CARBON	62K	5%	1/4W
R266	1-249-430-11	CARBON	12K	5%	1/4W	R556	1-247-887-00	CARBON	220K	5%	1/4W
R267	1-249-431-11	CARBON	15K	5%	1/4W	R557	1-249-439-11	CARBON	68K	5%	1/4W
R268	1-249-432-11	CARBON	18K	5%	1/4W	R558	1-247-878-00	CARBON	91K	5%	1/4W
R269	1-249-393-11	CARBON	10	5%	1/4W	R559	1-247-880-11	CARBON	110K	5%	1/4W
R270	1-247-883-00	CARBON	150K	5%	1/4W	R560	1-249-438-11	CARBON	56K	5%	1/4W
R273	1-249-429-11	CARBON	10K	5%	1/4W	R702	1-249-425-11	CARBON	4.7K	5%	1/4W
R501	1-249-409-11	CARBON	220	5%	1/4W	R703	1-249-420-11	CARBON	1.8K	5%	1/4W
R502	1-249-409-11	CARBON	220	5%	1/4W	R704	1-249-412-11	CARBON	390	5%	1/4W
R503	1-249-409-11	CARBON	220	5%	1/4W	R705	1-249-427-11	CARBON	6.8K	5%	1/4W
R504	1-249-409-11	CARBON	220	5%	1/4W	R706	1-249-419-11	CARBON	1.5K	5%	1/4W
R506	1-249-429-11	CARBON	10K	5%	1/4W	R707	1-249-429-11	CARBON	10K	5%	1/4W
R507	1-249-429-11	CARBON	10K	5%	1/4W	R708	1-247-836-11	CARBON	1.6K	5%	1/4W
R508	1-249-429-11	CARBON	10K	5%	1/4W	R709	1-249-425-11	CARBON	4.7K	5%	1/4W
R510	1-249-441-11	CARBON	100K	5%	1/4W	R710	1-249-409-11	CARBON	220	5%	1/4W
R511	1-249-429-11	CARBON	10K	5%	1/4W	R711	1-249-427-11	CARBON	6.8K	5%	1/4W
R512	1-249-441-11	CARBON	100K	5%	1/4W	R712	1-249-427-11	CARBON	6.8K	5%	1/4W
R513	1-249-428-11	CARBON	8.2K	5%	1/4W	R713	1-249-417-11	CARBON	1K	5%	1/4W
R514	1-249-441-11	CARBON	100K	5%	1/4W	R714	1-249-426-11	CARBON	5.6K	5%	1/4W
R515	1-249-423-11	CARBON	3.3K	5%	1/4W	R715	1-249-425-11	CARBON	4.7K	5%	1/4W

**Note:**  
The components identified by mark or dotted line with mark are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description			Ref.No.	Part No.	Description				
R716	1-249-421-11	CARBON	2.2K	5%	1/4W	R861	1-249-428-11	CARBON	8.2K	5%	1/4W
R717	1-249-429-11	CARBON	10K	5%	1/4W	R862	1-249-434-11	CARBON	27K	5%	1/4W
R718	1-249-429-11	CARBON	10K	5%	1/4W	R863	1-249-422-11	CARBON	2.7K	5%	1/4W
R719	1-249-433-11	CARBON	22K	5%	1/4W	R864	1-249-424-11	CARBON	3.9K	5%	1/4W
R720	1-249-426-11	CARBON	5.6K	5%	1/4W	R866	1-249-422-11	CARBON	2.7K	5%	1/4W
R721	1-249-430-11	CARBON	12K	5%	1/4W	R867	1-249-424-11	CARBON	3.9K	5%	1/4W
R722	1-247-752-11	CARBON	1K	5%	1/2W	R868	1-247-872-11	CARBON	51K	5%	1/4W
R724	1-249-433-11	CARBON	22K	5%	1/4W	R869	1-249-434-11	CARBON	27K	5%	1/4W
R725	1-249-421-11	CARBON	2.2K	5%	1/4W	R870	1-249-429-11	CARBON	10K	5%	1/4W
R726	1-247-887-00	CARBON	220K	5%	1/4W	R871	1-249-429-11	CARBON	10K	5%	1/4W
R727	1-249-425-11	CARBON	4.7K	5%	1/4W	R872	1-249-429-11	CARBON	10K	5%	1/4W
R728	1-249-435-11	CARBON	33K	5%	1/4W	R873	1-249-429-11	CARBON	10K	5%	1/4W
R729	1-247-903-00	CARBON	1M	5%	1/4W	R876	1-249-431-11	CARBON	15K	5%	1/4W
R730	1-249-414-11	CARBON	560	5%	1/4W	R1001	1-249-408-11	CARBON	180	5%	1/4W
R731	1-219-135-11	FUSIBLE	0.15	10%	1/4W	R1002	1-249-408-11	CARBON	180	5%	1/4W
R732	1-219-135-11	FUSIBLE	0.15	10%	1/4W	R1051	1-249-414-11	CARBON	560	5%	1/4W
R801	1-247-887-00	CARBON	220K	5%	1/4W	RV101	1-238-016-11	RES, ADJ, CARBON 10K (PB LEVEL)			
R802	1-247-887-00	CARBON	220K	5%	1/4W	RV102	1-238-016-11	RES, ADJ, CARBON 10K (REC LEVEL)			
R803	1-249-436-11	CARBON	39K	5%	1/4W	RV103	1-238-017-11	RES, ADJ, CARBON 22K (REC BIAS)			
R804	1-247-887-00	CARBON	220K	5%	1/4W	RV201	1-238-016-11	RES, ADJ, CARBON 10K (PB LEVEL)			
R805	1-249-436-11	CARBON	39K	5%	1/4W	RV202	1-238-016-11	RES, ADJ, CARBON 10K (REC LEVEL)			
R806	1-247-887-00	CARBON	220K	5%	1/4W	RV203	1-238-017-11	RES, ADJ, CARBON 22K (REC BIAS)			
R807	1-249-430-11	CARBON	12K	5%	1/4W	RV501	1-241-045-12	RES, VAR, CARBON 50K/50K (REC LEVEL)			
R808	1-249-435-11	CARBON	33K	5%	1/4W	RV502	1-238-904-11	RES, VAR, CARBON 50K/50K (BALANCE)			
R809	1-249-435-11	CARBON	33K	5%	1/4W	RV503	1-241-046-11	RES, VAR, CARBON 5K (BIAS)			
R812	1-249-435-11	CARBON	33K	5%	1/4W	RY501	1-515-683-11	RELAY			
R813	1-249-435-11	CARBON	33K	5%	1/4W	S501	1-572-154-11	SWITCH, ROTARY (DOLBY NR)			
R814	1-249-435-11	CARBON	33K	5%	1/4W	S502	1-571-305-11	SWITCH, PUSH (1 KEY)(MPX FILTER)			
R815	1-249-435-11	CARBON	33K	5%	1/4W	S701	1-571-305-11	SWITCH, PUSH (1 KEY)(POWER)			
R816	1-249-435-11	CARBON	33K	5%	1/4W	S851	1-554-303-21	SWITCH, KEY BOARD (OPEN/CLOSE)			
R817	1-249-435-11	CARBON	33K	5%	1/4W	S852	1-554-303-21	SWITCH, KEY BOARD (STOP)			
R818	1-249-435-11	CARBON	33K	5%	1/4W	S853	1-554-303-21	SWITCH, KEY BOARD (REW)			
R819	1-249-435-11	CARBON	33K	5%	1/4W	S854	1-554-303-21	SWITCH, KEY BOARD (FF)			
R820	1-212-954-11	FUSIBLE	6.8	5%	1/2W F	S855	1-554-303-21	SWITCH, KEY BOARD (REC)			
R821	1-249-429-11	CARBON	10K	5%	1/4W	S856	1-554-303-21	SWITCH, KEY BOARD (FWD)			
R822	1-249-431-11	CARBON	15K	5%	1/4W	S857	1-554-303-21	SWITCH, KEY BOARD (PAUSE)			
R823	1-247-834-11	CARBON	1.3K	5%	1/4W	S858	1-554-303-21	SWITCH, KEY BOARD (REC MUTE)			
R824	1-249-424-11	CARBON	3.9K	5%	1/4W	S859	1-554-303-21	SWITCH, KEY BOARD (RESET)			
R825	1-249-423-11	CARBON	3.3K	5%	1/4W	S860	1-554-303-21	SWITCH, KEY BOARD (MEMORY)			
R826	1-249-427-11	CARBON	6.8K	5%	1/4W	S861	1-554-303-21	SWITCH, KEY BOARD (DISPLAY MODE)			
R827	1-249-429-11	CARBON	10K	5%	1/4W	S863	1-571-520-11	SWITCH, SLIDE (TIMER)			
R828	1-212-952-00	FUSIBLE	5.6	5%	1/2W F	S1001	1-466-238-11	ENCODER, ROTARY			
R829	1-249-435-11	CARBON	33K	5%	1/4W	S1002	1-570-953-11	SWITCH, PUSH (1 KEY)(DOOR)			
R830	1-249-435-11	CARBON	33K	5%	1/4W	S1003	1-571-958-11	SWITCH, PUSH (1 KEY)(CLOSE)			
R831	1-249-425-11	CARBON	4.7K	5%	1/4W	S1004	1-572-126-11	SWITCH, PUSH (1 KEY)(OPEN)			
R832	1-249-417-11	CARBON	1K	5%	1/4W	S1005	1-572-125-11	SWITCH, LEAF (REC)			
R833	1-249-433-11	CARBON	22K	5%	1/4W	S1006	1-572-202-11	SWITCH, LEAF (HALF)			
R834	1-249-403-11	CARBON	68	5%	1/4W	S1007	1-572-125-11	SWITCH, LEAF (METAL)			
R851	1-249-441-11	CARBON	100K	5%	1/4W	S1008	1-572-125-11	SWITCH, LEAF (70US)			
R852	1-249-441-11	CARBON	100K	5%	1/4W	T101	1-433-354-11	TRANSFORMER, BIAS OSCILLATION			
R853	1-249-441-11	CARBON	100K	5%	1/4W	T201	1-433-354-11	TRANSFORMER, BIAS OSCILLATION			
R854	1-249-441-11	CARBON	100K	5%	1/4W	T501	1-433-355-11	TRANSFORMER, BIAS OSCILLATION			
R855	1-249-441-11	CARBON	100K	5%	1/4W	T901	1-450-099-11	(AEP,UK,WG)...TRANSFORMER, POWER			
R856	1-249-441-11	CARBON	100K	5%	1/4W	T901	1-450-100-11	(Canadian)....TRANSFORMER, POWER			
R857	1-249-441-11	CARBON	100K	5%	1/4W	TB1001*1-569-066-11	PIN, CONNECTOR 5P				
R858	1-249-441-11	CARBON	100K	5%	1/4W	X801	1-577-359-21	VIBRATOR, CERAMIC 4.19MHz			
R859	1-249-422-11	CARBON	2.7K	5%	1/4W						
R860	1-249-424-11	CARBON	3.9K	5%	1/4W						

ACCESSORY & PACKING MATERIAL

1-559-533-11 CORD, CONNECTION  
\*3-350-829-71 INDIVIDUAL CARTON  
\*3-350-830-01 CUSHION

3-751-743-11 (AEP,UK,Canadian)...MANUAL, INSTRUCTION  
(ENGLISH,FRENCH,SPANISH)  
3-751-743-41 (AEP)...MANUAL, INSTRUCTION  
(GERMAN,DUTCH,SWEDISH,ITALIAN)  
3-751-743-51 (WG)....MANUAL, INSTRUCTION (GERMAN)